



Flame Rod Length = Dimensions A + B + C.

DIMENSIONS SHOWN ARE SUBJECT TO CHANGE. PLEASE OBTAIN CERTIFIED PRINTS FROM FIVES NORTH AMERICAN COMBUSTION, INC. IF SPACE LIMITATIONS OR OTHER CONSIDERATIONS MAKE EXACT DIMENSION(S) CRITICAL.

TABLE 2. Adapter selection

Part Number	Flame Rod Holder	Holder Connection Size	Notes	Adapter No.	Dim. "B"
R130-5598	C7007A-1001	1/2" mpt	—	8832	2 3/4"
R130-5580	C7011A-1005	1 1/4" fpt	Angle type	8833	3"

TABLE 3. Adapter lengths

Adapter Designation	"C" Length, inches	Adapter Designation	"C" Length, inches
8832-A	6 7/8	8833-A	9
8832-B	5	8833-B	7 3/8
8832-C	4 3/4	8833-D	7 3/8
8832-D	5 1/2		
8832-H	3 7/8	8833-H	5 1/8
8832-J	See Bul. 8832	8833-J	1 7/8
8832-M	See Bul. 8832	8833-L	11
8832-P	6 13/16	8833-M	1 7/8

TABLE 4. Flame rod selection

Part Number	Description	Honeywell Part no.
R130-5590	12" x 3/16" flame rod (Kanthal)	102709A
R130-5592	18" x 3/16" flame rod (Kanthal)	102709B
R130-5594	24" x 3/16" flame rod (Kanthal)	102709C