

1008A PART LIST

PARTS LIST		- 0 (3/4")	- 1 (1")	- 2 (1-1/4")	- 3 (1-1/2")	- 4 (2")	- 5 (2-1/2")	- 6 (3")	- 7 (4")	- 8 (6")
1	Gasket **	2-11323-11	2-11323-12	2-11323-13	2-11323-14	2-11323-15	2-11323-16	2-11323-17	2-11323-18	2-11323-19
2	Bottom Plate **	2-11325-2	2-11326-2	2-11327-2	2-11328-2	2-11329-2	2-11330-2	2-11331-2	2-11332-2	2-11333-2
3	Swivel Block assembly	2-5021-2	2-5021-2	2-5021-2	2-5021-2	2-5021-2	2-5021-2	2-5021-2	2-5021-2	2-5021-2
4	Adjusting Screw assembly	2-4888-1	2-4888-1	2-4888-1	2-4888-2	2-4888-2	2-4888-2	2-4888-3	2-4888-3	2-4888-4
5	Handle	2-3706-1	2-3706-1	2-3707-1	2-3707-1	2-3707-1	2-3707-2	2-3707-2	2-3707-2	2-3707-2
6	Indicator Dial	2-4348-1	2-4348-1	2-4347-1	2-4347-1	2-4347-1	2-4347-1	2-4347-1	2-4347-1	2-4347-1
7	L Bracket Optional U Bracket	2-0516-1 2-0588-1	2-0516-1 2-0588-1	2-0587-1 2-0589-1	2-0517-1 2-0590-1	2-0517-1 2-0590-1	2-0518-1 2-0591-1	2-0518-1 2-0591-1	2-0518-1 2-0591-1	2-0518-1 2-0591-1
8	Seal Nut assembly Standard ^{*(1)} (with O rings)	2-11334-1	2-11334-1	2-11335-1	2-11335-1	2-11335-1	2-11336-1	2-11336-1	2-11336-1	2-11336-1
	Seal Nut assembly for Steam ^{*(1)} (with O rings)	2-11334-2	2-11334-2	2-11335-2	2-11335-2	2-11335-2	2-11336-2	2-11336-2	2-11336-2	2-11336-2
SEAL NUT ASSEMBLY										
9	Seal Nut Standard (less O rings)	2-11283-1	2-11283-1	2-11284-1	2-11284-1	2-11284-1	2-11285-1	2-11285-1	2-11285-1	2-11285-1
10	Inner O Ring Standard (2) req'd	R520-4080-V	R520-4080-V	R520-4102-V	R520-4102-V	R520-4102-V	R520-4140-V	R520-4140-V	R520-4140-V	R520-4140-V
	Inner O Ring Steam (2) req'd	R520-4080-EP	R520-4080-EP	R520-4102-EP	R520-4102-EP	R520-4102-EP	R520-4140-EP	R520-4140-EP	R520-4140-EP	R520-4140-EP
11	Outer O Ring Standard	R520-4115-V	R520-4115-V	R520-4166-V	R520-4166-V	R520-4166-V	R520-4207-V	R520-4207-V	R520-4207-V	R520-4207-V
	Outer O Ring Steam	R520-4115-EP	R520-4115-EP	R520-4166-EP	R520-4166-EP	R520-4166-EP	R520-4207-EP	R520-4207-EP	R520-4207-EP	R520-4207-EP
ADJUSTING SCREW ASSEMBLY										
12	Curtain Adjusting Screw	2-0724-1A	2-0724-1A	2-0724-1A	2-4890-1	2-4890-1	2-4890-1	2-0792-1A	2-0792-1A	2-0783-1A
13	Collar	N/A	N/A	N/A	2-4889-1	2-4889-1	2-4889-1	2-0794-1A	2-0794-1A	2-0785-1A
14	Packing	2-6563-1	2-6563-1	2-6563-1	2-6563-2	2-6563-2	2-6563-2	2-6563-3	2-6563-3	2-6563-4
15	Packing Nut	2-0773-6	2-0773-6	2-0773-6	2-0773-3	2-0773-3	2-0773-3	2-0773-4	2-0773-4	2-0773-1
16	Adjusting Screw Knob	2-0725-1	2-0725-1	2-0725-1	2-0762-1	2-0762-1	2-0762-1	2-0793-1	2-0793-1	2-0784-1
17	Collar Roll Pin	N/A	N/A	N/A	R570-4130-S	R570-4130-S	R570-4130-S	R570-4180-S	R570-4180-S	R570-4220-S
18	Knob Roll Pin	R570-4130	R570-4130	R570-4130	R570-4135	R570-4135	R570-4135	R570-4190	R570-4190	R570-4230
FLANGE ASSEMBLY										
19	Companion Flange	-	-	-	-	-	-	-	2-0855-1 (2 req'd)	2-3730-2 (2 req'd)
20	Flange Gasket	-	-	-	-	-	-	-	2-1295-4 (2 req'd)	2-1295-5 (2 req'd)
21	Flange Bolt	-	-	-	-	-	-	-	R066-3750(10 req'd)	R066-3750 (12 req'd)
22	Flange Nut	-	-	-	-	-	-	-	R510-2399(10 req'd)	R510-2399 (12 req'd)

** Replacement parts required to upgrade an old-style 1008 series valve into a 1008A series valve. These parts are required to repair the shaft seal or bottom plate gasket seal on an old-style 1008 series valve (see Replacement Parts info on this sheet).

(1) This item must be removed with the handle facing down.