



TABLE 4— CONTROL PANEL

Item No.	Description	Part No.									
		LCX40 (W)(E)(A)	LC50 (W)(E)(A)	LCX50 (W)(E)(A)	LC60 (W)(E)(A)	LCX60 (W)(E)(A)	LC70 (W)(E)(A)	LCX75 (W)(E)(A)	LCX85 (W)(E)(A)	LC100 (W)(E)(A)	
1	Manual (On-Off-Stop) Switch	←	←	←	←	←	←	←	←	←	
2	Suction Pressure Gauge	←	←	←	←	←	←	←	←	←	
3	Discharge Pressure Gauge	←	←	←	←	←	←	←	←	←	
4	Oil Pressure Gauge	←	←	←	←	←	←	←	←	←	
5	Suction Gauge Conn.	←	←	←	←	←	←	←	←	←	
6	Discharge Gauge Conn.	←	←	←	←	←	←	←	←	←	
7	Oil Gauge Conn.	←	←	←	←	←	←	←	←	←	
8	Indicator Light	←	←	←	←	←	←	←	←	←	
9	Decorative Panel	←	←	←	←	←	←	←	←	←	
10	Fuse Holder	←	←	←	←	←	←	←	←	←	
11	Fuse	←	←	←	←	←	←	←	←	←	
12	Knob (On-Off-Stop) Switch	←	←	←	←	←	←	←	←	←	
13 *	Lock and Key	←	←	←	←	←	←	←	←	←	
14 *	Key Only	←	←	←	←	←	←	←	←	←	
15	1/4 Flare Union	←	←	←	←	←	←	←	←	←	
16	Terminal Block	←	←	←	←	←	←	←	←	←	
17	Oil Failure Switch (OPA & B)	←	←	←	←	←	←	←	←	←	
18	HP & LP Pressure Cut-out	←	←	←	←	←	←	←	←	←	
19	1-R Control Relay	←	←	←	←	←	←	←	←	←	
20	2-R Control Relay	←	←	←	←	←	←	←	←	←	
21	3-R Control Relay	←	←	←	←	←	←	←	←	←	
22	SC Freeze Control	←	←	←	←	←	←	←	←	←	
23	1-THS Capacity Control Thermo.	←	←	←	←	←	←	←	←	←	
24	2-THS Low Temp. Thermo.	←	←	←	←	←	←	←	←	←	
25	Angle Stop Valve (Gauges)	←	←	←	←	←	←	←	←	←	
26	Wiring Harness	←	←	←	←	←	←	←	←	←	
27	Marker Strip	←	←	←	←	←	←	←	←	←	
28	Mounting Plate	←	←	←	←	←	←	←	←	←	
29	Grommet	←	←	←	←	←	←	←	←	←	
30	Mounting Stud	←	←	←	←	←	←	←	←	←	
31	Gauge Header	←	←	←	←	←	←	←	←	←	

\* Not Shown

\*\* On "A"-Models use Part No. 025-14742

NOTE: For replacement motors and starters, order from York, by description, being sure to list original York Sales Order Number.