



MODEL LC100W - ILLUSTRATED

TABLE 5— ACCESSORIES FOR FIELD INSTALLATION

Item No.	Description	Part No.								
		LCX40 (W)(E)(A)	LC50 (W)(E)(A)	LCX50 (W)(E)(A)	LC60 (W)(E)(A)	LCX60 (W)(E)(A)	LC70 (W)(E)(A)	LCX75 (W)(E)(A)	LCX85 (W)(E)(A)	LC100 (W)(E)(A)
1	Load Minder Kit (Complete)	467-80020	467-80020	467-80020	467-78803	467-78803	467-78803	467-78803	467-78803	467-78803
2	Valve, Hot Gas	025-14106	025-14106	025-14106	025-10507	025-10507	025-10507	025-10507	025-10507	025-10507
3	Valve, Hot Gas Pilot	025-10509	025-10509	025-10509	025-10509	025-10509	025-10509	025-10509	025-10509	025-10509
4	Valve, Solenoid	025-14183	025-14183	025-14183	025-14183	025-14183	025-14183	025-14183	025-14183	025-14183
5	Coil, Solenoid Valve	025-09654	025-09654	025-09654	025-09654	025-09654	025-09654	025-09654	025-09654	025-09654
6 *	Low Ambient Start Kit (Complete)	367-86028	367-86028	367-86028	367-86028	867-86028	367-86028	367-86028	367-86028	367-86028
7 *	Relay	024-12357	024-12357	024-12357	024-12357	024-12357	024-12357	024-12357	024-12357	024-12357
8 *	Relay, Time Delay	024-14074	024-14074	024-14074	024-14074	024-14074	024-14074	024-14074	024-14074	024-14074
9 *	Load Sequencing Kit (Complete)	366-09672	366-09672	366-09672	366-09672	366-09672	366-09672	366-09672	366-09672	366-09672
10 *	Timer 1TR	025-15608	025-15608	025-15608	025-15608	025-15608	025-15608	025-15608	025-15608	025-15608
11 *	Timer 2TR	025-15608	025-15608	025-15608	025-15608	025-15608	025-15608	025-15608	025-15608	025-15608
12 *	Relay, Time Delay 3TR	024-13711	024-13711	024-13711	024-13711	024-13711	024-13711	024-13711	024-13711	024-13711
13 *	Switch, Selector, 2 Position	024-08851	024-08851	024-08851	024-08851	024-08851	024-08851	024-08851	024-08851	024-08851
14 *	Flow Switch (McDonnell) Model FS4-3 (Replaces FS4 & FS7)	024-10465	024-10465	024-10465	024-10465	024-10465	024-10465	024-10465	024-10465	024-10465
15 *	Control Transformer									
	Enclosed									
	208 to 480 Volts 550 to 600 Volts	025-12012 025-12591	025-12012 025-12591	025-12012 025-12591	025-12012 025-12591	025-12012 025-12591	025-12012 025-12591	025-12012 025-12591	025-12012 025-12591	025-12012 025-12591
Open (For Mtg. in York Starter)										
	208 to 480 Volts 550 to 600 Volts	— —	025-14108 025-15532	— —	025-14108 025-15532	— —	025-14108 025-15532	— —	— —	025-14108 025-15532

\* Not Shown