



Item No.	Description	Part No.			
		LCHA20	LCHA25	LCHA35	LCHA45
1	Panel, Front (Left Hand)	363-37007	362-94569	—	—
	Panel, Front (Right Hand)	—	—	366-33718	363-34497
2	Panel, Side (Left Hand)	063-37006	062-94570	066-33706	063-32673
3	Panel, Side (Right Hand)	066-34738	063-28700	066-32308	066-36681
4	Panel, Side (Left Hand)	062-90619	362-94567	363-21328	363-32814
5	Panel, Side (Right Hand)	062-90620	362-94568	363-21327	363-32817
6	Panel, Rear	362-90670	062-94531	063-21497	063-32818
7	Panel, Top	062-90599	362-94472	063-21526	063-32836
8	Cover, Control Box	366-35141	366-31695	366-34217	366-40407
9	Guard, Fan	026-19807	026-19807	026-15946	026-19807
10*	Switch, Flow	024-15793	024-15793	024-15793	024-15793
11*	Thermostat, Disch. Temp.	025-09776	025-09776	025-09776	025-09776

* Not Shown

FIG. 1 — EXTERIOR PARTS