



Item No.	Description	Part No.
1	Transformer	325-09025004
2	Relay, Time Delay (2TR)	024-12045001
3	Fuseholder	025-14213
4	Fuse (1FU, 2FU) -46E & -50E -58E	025-05741 025-06079
5	Module	025-19369002
6	Block, Terminal (1TB)	025-12269
7	Transformer -46E & -50E -58E	025-11883 025-16720
8	Contactor	024-15788016
9	Control, Pressure (HP)	025-20054
10	Capacitor (1RC, 2RC, 3RC, 4RC)	024-20042
11	Control, Pressure (1LP)	025-20768
12	Control, Oil Pressure (O.P.)	025-17151
13	Thermostat (1TH)	025-14237
14	Relay (3R)	024-12066
15	Relay (1R)	02408695
16	Block, Terminal (2TB)	025-14980
17	Relay (2R)	024-11772
18	Block, Terminal (3TB)	025-14513
19	Fuseholder	325-06924011
20	Fuse	025-08445

FIG. 8 — MAIN CONTROL PANEL — LCHA20-46, -50, -58