

ELECTRICAL COMPONENTS

ITEM NO.	DESCRIPTION	FIG. NO.	PART NUMBER		
			208/230-3-60 ¹	460-3-60 ²	575-3-60
1	Block, Terminal (1TB)	2 & 3	025-12164	025-12269	025-12269
2	Block, Terminal (2TB)	2 & 3	025-14980	025-14980	025-14980
3	Block, Terminal (3TB)	2 & 3	025-14513	025-14513	025-14513
4	Block, Terminal (4TB) 8-Req'd.	4	025-15865	025-15865	025-15865
5	Block, Terminal End (For Item 4)	4	025-13981	025-13981	025-13981
6	Block, Terminal (5TB)	4	025-16100	025-16100	025-16100
7	Capacitor (1RC thru 4RC)	2 & 3	024-12098	024-12098	024-12098
8	Contactor (1M)	2 & 3	024-12405	024-12405 ¹⁵⁷⁸⁸	024-12405 ^{15788 DD7}
9	Contactor (2M)	2	024-13701 ^{12.4.01}	_____ ¹²⁰¹⁶	_____
10	Control, Pressure, Dual (1LP & 1HP)	2 & 3	025-12280	025-12280	025-12280
11	Control, Temperature (TC-2)	4	025-16782-001	025-16782-001	025-16782-001
12	Control, Oil Pressure Switch (OP)	2 & 3	025-17151	025-17151	025-17151
13	Control, Low Pressure (2LP)	4	025-17461	025-17461	025-17461
14*	Compressor (20-Tons)	Not Shown	365-23102-010	365-23102-011	365-23102-012
15	Fuse, 3.2 AMP, Plug-in (5FU)	2 & 3	025-08445	025-08445	025-08445
16	Fuse, 15 AMP (1FU & 2FU)	2 & 3	_____	025-05741	025-05741
	30 AMP (1FU & 2FU)	2 & 3	025-04649	_____	_____
17	Holder, Fuse (For Item 15)	2 & 3	325-06924-011	325-06924-011	325-06924-011
18	Holder, Fuse (For Item 16)	2 & 3	025-05259	025-14213	025-14213
19	Insulation, (For Item 3)	2 & 3	025-14511	025-14511	025-14511
20	Module, Compressor Motor Protector (MP)	2 & 3	025-15702-002	025-15702-002	025-15702-002
21	Motor, Condenser Fan, 1/2 HP	1	024-17420	024-17420	024-17420
22	Motor, Condenser Fan, 1/3 HP	1	024-12801	024-12801	024-12801
23	Outlet, Convenience	4	025-14023	025-14023	025-14023
24	Relay, Control (1R)	2 & 3	024-08695	024-08695	024-08695
25	Relay, Control (2R)	2 & 3	024-11772	024-11772	024-11772
26	Relay, Lockout (3R)	2 & 3	024-12066	024-12066	024-12066
27	Relay, Control (4R)	4	024-11090	024-11090	024-11090
28	Relay, Control (5R & 6R)	4	024-11771	024-11771	024-11771
29	Relay, Control (7R)	4	024-12955	024-12955	024-12955
30	Relay, Control (8R)	4	024-12999	024-12999	024-12999
31	Relay, Control (10R)	4	024-11953	024-11953	024-11953
32	Relay, Control (11R)	4	024-11094	024-11094	024-11094
33	Relay, Control (12R thru 15R)	4	024-16018	024-16018	024-16018
34	Relay, Time Delay (1TR)	2	024-16687	_____	_____
35	Sensor (For Item 11)	Not Shown	025-16782-007	025-16782-007	025-16782-007
36	Switch, Toggle (S)	4	366-31963	366-31963	366-31963
37	Thermostat, Low Ambient (1TH)	2 & 3	025-14237	025-14237	025-14237
38	Thermostat, Low Ambient Accessory (2TH)	Not Shown	025-15013	025-15013	025-15013
39*	Thermostat, Discharge Temperature (3TH)	Not Shown	_____	_____	_____
40	Thermostat, Cooler Heater (4TH)	4	025-16790	025-16790	025-16790
41	Thermostat, Outside Ambient, Honeywell (5TH)	4	025-16785	025-16785	025-16785
42	Thermostat, Freeze Control (6TH)	4	025-16791	025-16791	025-16791
43	Transformer (75 VA)	2 & 3	325-09025-004	325-09025-004	325-09025-004
44	Transformer (3 KVA)	3	_____	025-11883	025-16720
45	Timer, Pumpdown (4TR)	4	325-17460-001	325-17460-001	325-17460-001

* For complete listing of renewal parts available for compressor repair, see Form 180.40-RP.

¹ Part numbers also apply to 200-3-50 model (-61A).

² Part numbers also apply to 400-3-50 model (-67A).