

REFRIGERANT PIPING

Item No.	Description	55 Fig. 7	65 Fig. 8	85 Fig. 9	95 Fig. 9
1	Coil, Condenser, Front	366-58237	366-58237	366-58237	366-58237
2	Coil, Condenser, Front (with speed control conn.)	366-65789	366-65789	366-65789	366-65789
3	Coil, Condenser, Rear	366-58238	366-58238	366-58238	366-58238
4	Coil, Condenser, Rear (with speed control conn.)	366-65790	366-65790	366-65790	366-65790
5	Connection, Discharge	366-74352	366-74350	366-74368	366-74368
6	Connection, Discharge	066-60908	066-60908	066-60770	066-60770
7	Connection, Discharge	066-60907	066-60907	066-58592	066-58592
8	Connection, Discharge	366-74351	366-74349	366-74367	366-74367
9	Connection, Suction	366-74332	366-74334	366-74193	366-74193
10	Connection, Suction	064-26986	064-26986	063-48992	063-48992
11	Connection, Suction	366-74299	366-74300	366-74195	366-74197
12	Connection, Suction	366-74258	366-74333	366-74823	366-74823
13	Connection, Suction	366-74299	366-74300	366-74194	366-74196
14	Connection, dehydrator to Solenoid Valve	066-65285	066-65292	066-65282	066-65280
15	Connection, dehydrator to Solenoid Valve	066-65285	066-65292	066-65283	066-65283
16	Connection, dehydrator to Stop Valve	064-19372	064-20281	066-65277	066-65277
17	Connection, dehydrator to Stop Valve	064-19372	064-20281	066-65275	066-65275
18	Connection, Solenoid Valve to Expansion Valve	066-65284	066-65290	066-65278	066-65278
19	Connection, Solenoid Valve to Expansion Valve	066-65284	066-65291	066-65279	066-65281
20	Connection, Liquid, R.H.	366-74457	366-74457	366-74459	366-74459
21	Connection, Liquid, L. H.	366-74458	366-74458	366-74460	366-74460
22	Connection, Liquid	066-65270	066-65270	066-65270	066-65270
23	Connection, Liquid	066-65271	066-65271	066-65271	066-65271
24	Connection, Liquid	066-65272	—	066-65272	066-65272
25	Connection, Liquid	066-65273	—	066-65273	066-65273
26	Connection, Liquid	066-65293	066-65293	066-65293	066-65293
27	Connection, Liquid	—	—	—	066-65295
28	Connection, Liquid	—	—	—	066-65294
29	Connection, Sensor, Speed Control	366-65628	366-65628	366-65628	366-65628
30	Connection, 1/4,	366-65663	366-65670	366-65670	366-65669
31	Connection, 1/4,	366-65672	366-65664	366-65671	366-65665
32	Connector, Flare, 1/4	023-00927	023-00927	023-00927	023-00927
33	Dehydrator	026-20145	026-20145	026-20146	026-20146
34	Core, Dehydrator	—	—	026-09086	026-09086
35	Header, Discharge	066-58628	066-58628	066-58628	066-58628
36	Header, Discharge	066-59775	—	066-59756	066-59444
37	Header, Discharge	—	—	066-59445	066-65313
38	Header, Discharge	066-59751	066-65313	066-59751	066-59751
39	Header, Discharge, L.H.	366-65627	366-65627	366-65627	366-65627
40	Header, Discharge, R.H.	366-65626	366-65626	366-65626	366-65626
41	Header, Discharge, R.H.	366-65624	366-65624	366-65624	366-65624
42	Header, Discharge, L.H.	366-65625	366-65625	366-65625	366-65625
43	Header, Liquid, R.H.	366-74401	366-74402	366-74405	366-74406
44	Header, Liquid	—	—	366-74404	066-58670
45	Header, Liquid, L.H.	366-74400	366-74403	366-74403	366-74403
46	Head, Tube	062-29836	062-29836	062-29836	062-29836
47	Indicator, Moisture	026-16957	026-16957	026-20147	026-20147
48	Cap for Item 47	026-16958	026-16958	026-16958	026-16958
49	Tube	—	067-35033	067-35033	067-35033
50	Valve, Schrader, Access	022-05139	022-05139	022-05139	022-05139
51	Depressor Coupler for Item 50	023-10141	023-10141	023-10141	023-10141
52	Valve, Solenoid	025-19215	025-19216	025-19217	025-19218
53	Valve, Solenoid	—	—	—	025-19217
54	Valve, Stop	025-10510	025-10510	022-03043	022-03043
55	Valve, Thermal Expansion	025-19331	025-19332	025-19333	025-19333
56	Valve, Thermal Expansion	—	—	025-19333	025-19334