

## ELECTRICAL COMPONENTS

ITEM NO.	DESCRIPTION	FIG. NO.	PART NUMBER		
			208/230-3-60 <sup>1</sup>	460-3-60 <sup>2</sup>	575-3-60
1	Block, Terminal (1TB)	2 & 3	025-12285	025-14657	025-15517
2	Block, Terminal (2TB)	2 & 3	025-17145	025-17145	025-17145
3	Block, Terminal (3TB)	2 & 3	025-10506	025-10506	025-10506
4	Block, Terminal (4TB)	4	025-15865	025-15865	025-15865
5	Block, Terminal, End (For Item 4)	4	025-13981	025-13981	025-13981
6	Block, Terminal (5TB)	4	025-16100	025-16100	025-16100
7	Bracket, Mounting (For Item 15)	2 & 3	066-34745	066-34745	066-34745
8	Bushing	2 & 3	025-10209	025-10209	025-10209
9	Capacitor, (1RC thru 4RC)	2 & 3	024-12154	024-12154	024-12154
10	Contactor (1M) →	2 & 3	024-16866 <sup>14714</sup>	024-16866 <sup>14714</sup>	024-16866 <sup>14714</sup>
11	Contactor (2M)	2	024-11862	—	—
12	Contactor (3M)	2 & 3	024-14520	024-14520	024-14520
13	Control, Pressure, Dual (1LP & 1HP)	2 & 3	025-12280	025-12280	025-12280
14	Control, Temperature (TC-2)	4	025-16782-002	025-16782-002	025-16782-002
15	Control, Oil Pressure Switch (OP)	2 & 3	025-17151	025-17151	025-17151
16	Control, Pressure, Low (2LP)	4	025-17461	025-17461	025-17461
17*	Compressor (30-Ton)	Not Shown	365-23104-010	365-23104-018	365-23104-012
18	Fuse, 3.2 AMP (5FU)	2 & 3	025-08445	025-08445	025-08445
19	Fuse, 15 AMP (1FU & 2FU)	2 & 3	—	025-05741 <sup>011</sup>	025-05741
	30 AMP (1FU & 2FU)	2 & 3	025-04649	—	—
20	Grommet (For Items 43 and 44)	2 & 3	028-04590	028-04590	028-04590
21	Grommet (For Item 13)	2 & 3	028-02091	028-02091	028-02091
22	Holder, Fuse (For Item 18)	2 & 3	325-06924-014	325-06924-014	325-06924-014
23	Holder, Fuse (For Item 19)	2 & 3	025-14367	025-14213	025-14213
24	Insulation (For Item 3)	2 & 3	025-16900	025-16900	025-16900
25	Module, Compressor Motor Protector (MP)	2 & 3	025-15702-002	025-15702-002	025-15702-002
26	Motor, Condenser Fan	1	024-16497	024-16497	024-16497
27	Outlet, Convenience	4	025-14023	025-14023	025-14023
28	Relay, Control (1R)	2 & 3	024-13304	024-13304	024-13304
29	Relay, Control (2R)	2 & 3	024-11090	024-11090	024-11090
30	Relay, Control (3R)	2 & 3	024-13304	024-13304	024-13304
31	Relay, Lockout (4R)	2 & 3	024-12066	024-12066	024-12066
32	Relay, Control (5R)	4	024-11090	024-11090	024-11090
33	Relay, Control (6R)	4	024-11771	024-11771	024-11771
34	Relay, Control (7R)	4	024-12955	024-12955	024-12955
35	Relay, Control (9R)	4	024-11771	024-11771	024-11771
36	Relay, Lockout (10R)	4	024-11953	024-11953	024-11953
37	Relay, Control (12R thru 15R)	4	024-16018	024-16018	024-16018
38	Relay, Time Delay (1TR)	2	024-16687	—	—
39	Relay, Time Delay (2TR)	2 & 3	024-16672	024-16672	024-16672
40	Sensor (For Item 14)	Not Shown	025-16782-007	025-16782-007	025-16782-007
41	Switch, Toggle (S)	4	366-31963	366-31963	366-31963
42	Strap, Capacitor (For Item 9)	2 & 3	063-20447	063-20447	063-20447
43	Thermostat, (1TH)	2 & 3	025-15521	025-15521	025-15521
44	Thermostat, (2TH)	2 & 3	025-15520	025-15520	025-15520
45	Thermostat, Low Ambient Accessory (3TH)	Not Shown	025- <del>01761</del>	025- <del>01761</del>	025- <del>01761</del> <sup>17066</sup>
46*	Thermostat, Discharge Temperature (4TH)	Not Shown	—	—	—
47	Thermostat, Cooler Heater (5TH)	4	025-16790	025-16790	025-16790
48	Thermostat, Outside Ambient, Honeywell (6TH)	4	025-16785	025-16785	025-16785
49	Thermostat, Freeze Control (7TH)	4	025-16791	025-16791	025-16791
50	Timer, Pumpdown (4TR)	4	325-17460-001	325-17460-001	325-17460-001
51	Transformer, (75VA)	2 & 3	325-09025-008	325-09025-008	325-09025-008
52	Transformer, (5KVA)	Not Shown	—	025-15507	025-15264

\* For complete listing of renewal parts available for compressor repair, see Form 180.40-RP.

<sup>1</sup> Part numbers also apply to 200-3-50 model (-61A).

<sup>2</sup> Part numbers also apply to 400-3-50 model (-67A).