

## ELECTRICAL COMPONENTS

ITEM NO.	DESCRIPTION	FIG. NO.	PART NUMBER		
			208/230-3-60 <sup>1</sup>	460-3-60 <sup>2</sup>	575-3-60
1	Block, Terminal (1TB)	2 & 3	025-12285	025-14657	025-15517
2	Block, Terminal (2TB)	2 & 3	025-17145	025-17145	025-17145
3	Block, Terminal (3TB)	2 & 3	025-10506	025-10506	025-10506
4	Block, Terminal (4TB) 8-Req'd.	4	025-15865	025-15865	025-15865
5	Block, Terminal, End (For Item 4)	4	025-13981	025-13981	025-13981
6	Block, Terminal (5TB)	4	025-16100	025-16100	025-16100
7	Capacitor (1RC thru 4RC) LCHA35-25A (RC) LCHA35-46A and -58A	2 3	024-12331	024-12331	024-12331
8	Contactor (1M)	2 & 3	024-16406-063	024-16406-009	024-16406-009
9	Contactor (2M)	2 & 3	024-16406-057	024-16406-003	024-16406-003
10	Contactor (3M thru 6M) LCHA35-46A and -58A (3M) LCHA35-25A	3 2	024-14520 024-16361	024-14520	024-14520
11	Control, Pressure, Dual (1HP and 1LP)	2 & 3	025-12280	025-12280	025-12280
12	Control, Temperature (TC-2)	4	025-16782-001	025-16782-001	025-16782-001
13	Control, Oil Pressure Switch (OP)	2 & 3	025-17151	025-17151	025-17151
14	Control, Low Pressure (2LP)	4	025-17461	025-17461	025-17461
15*	Compressor (40-Ton)	Not Shown	365-23379-010	365-23379-011	365-23379-012
16	Fuse, 3.2 AMP (5FU)	2 & 3	025-08445	025-08445	025-08445
17	Fuse, 15 AMP (1FU, 2FU & 3FU) 30 AMP (1FU, 2FU & 3FU)	2 & 3 2 & 3	025-04649	025-05741	025-05741
18	Holder, Fuse (For Item 16)	2 & 3	325-06924-014	325-06924-014	325-06924-014
19	Holder, Fuse (For Item 17)	2 & 3	025-05252	025-13947	025-13947
20	Insulation (For Item 3)	2 & 3	025-16981	025-16981	025-16981
21	Module, Compressor Motor Protector (MP)	2 & 3	025-15702-002	025-15702-002	025-15702-002
22	Motor, Condenser Fan	1	024-15489-001	024-15489-002	024-15489-003
23	Outlet, Convenience	4	025-14023	025-14023	025-14023
24	Relay, Control (1R)	2 & 3	024-11533	024-11533	024-11533
25	Relay, Control (2R)	2 & 3	024-11090	024-11090	024-11090
26	Relay, Control (3R & 4R)	2 & 3	024-16920	024-16920	024-16920
27	Relay, Lockout (5R)	2 & 3	024-12066	024-12066	024-12066
28	Relay, Control (8R & 9R)	4	024-11771	024-11771	024-11771
29	Relay, Lockout (10R)	4	024-11953	024-11953	024-11953
30	Relay, Control (12R thru 15R)	4	024-16018	024-16018	024-16018
31	Relay, Control (16R)	4	024-11090	024-11090	024-11090
32	Relay, Control (17R)	4	024-12955	024-12955	024-12955
33	Relay, Time Delay (1TR)	2 & 3	024-16687	024-16687	024-16687
34	Relay, Time Delay (2TR)	2 & 3	024-16672	024-16672	024-16672
35	Sensor (For Item 12)	Not Shown	025-16782-007	025-16782-007	025-16782-007
36	Switch, Toggle (S)	4	366-31963	366-31963	366-31963
37	Thermostat (1TH)	2 & 3	025-15521	025-15521	025-15521
38	Thermostat (2TH)	2 & 3	025-15520	025-15520	025-15520
39	Thermostat, Low Ambient Accessory (3TH)	Not Shown	025-17061	025-17061	025-17061
40*	Thermostat, Discharge Temperature (4TH)	Not Shown	—	—	—
41	Thermostat, Cooler Heater (5TH)	4	025-16790	025-16790	025-16790
42	Thermostat, Outside Ambient, Honeywell (6TH)	4	025-16785	025-16785	025-16785
43	Thermostat, Freeze Control (7TH)	4	025-16791	025-16791	025-16791
44	Timer, Pumpdown (4TR)	4	325-17460-001	325-17460-001	325-17460-001
45	Transformer (75VA)	2 & 3	325-09025-008	325-09025-008	325-09025-008
46	Transformer (2KVA)	Not Shown	—	025-15368	025-16801

\* For complete listing of renewal parts available for compressor repair, see Form 180.40-RP.

<sup>1</sup> Part numbers also apply to 200-3-50 model (-61A).

<sup>2</sup> Part numbers also apply to 400-3-50 model (-67A).