

ELECTRICAL COMPONENTS

ITEM NO.	DESCRIPTION	FIG. NO.	PART NO.		
			208/230-3-60 ¹	460-3-60 ²	575-3-60
1	Block, Terminal (1TB)	2 & 3	025-15978	025-15978	025-15978
2	Block, Terminal (2TB)	2 & 3	025-15865	025-15865	025-15865
3	Block, Terminal, End (For Item 2)	2 & 3	025-13981	025-13981	025-13981
4	Capacitor (1RC thru 6RC) (1RC and 2RC)	2 3	025-12154	024-12154	024-12154
5	Contactor (1M)	2 & 3	024-16406-003	024-16406-012	024-16406-012
6	Contactor (2M)	2 & 3	024-16406-012	024-16406-048	024-16406-048
7	Contactor (3M)	2 & 3	024-16406-039	024-14520	024-14520
8	Contactor (4M)	2 & 3	024-16406-048	024-14520	024-14520
9	Contactor (5M)	2 & 3	024-14728-006	024-14728-006	024-14728-006
10	Contactor (6M)	3	024-14520	024-14520	024-14520
11	Contactor (7M)	3	024-14520	024-14520	024-14520
12	Control, Pressure, Dual (1LP & 1HP)	2 & 3	025-12280	025-12280	025-12280
13	Control, Pressure, Dual (2LP & 2HP)	2 & 3	025-12280	025-12280	025-12280
14	Control, Low Pressure (3LP & 4LP)	4	025-17461	025-17461	025-17461
15	Control, High Pressure (3HP & 4HP)	2 & 3	025-17029	025-17029	025-17029
16	Control, Oil Pressure Switch (10P & 20P)	2 & 3	025-17151	025-17151	025-17151
17	Control, Fan Speed (1SC & 2SC)	2 & 3	025-17024	025-17024	025-17024
18	Control, Freeze (FC)	2 & 3	025-16791	025-16791	025-16791
19*	Compressor, 20-Ton (#1)	Not Shown	365-23102-010	365-23102-011	365-23102-012
	30-Ton (#2)	Not Shown	365-23104-010	365-23104-011	365-23104-012
20	Fuse, 3.2 AMP (4FU)	2 & 3	025-08445	025-08445	025-08445
21	Fuse, 15 AMP (1FU, 2FU & 3FU) 20 AMP (1FU, 2FU & 3FU)	2 & 3 2 & 3	025-05750	025-05741	025-05741
22	Fuseholder (For Item 20)	2 & 3	225-06924-015	225-06924-015	225-06924-015
23	Fuseholder (For Item 21)	2 & 3	025-05252	025-13947	025-13947
24	Light, Indicator (1L & 2L)	2 & 3	025-16308	025-16308	024-16308
25	Module, Compressor Motor Protector (1MP & 2MP)	2 & 3	025-15702-002	025-15702-002	025-15702-002
26	Motor, Condenser Fan, #2, 3, 4 & 6 #1, 5	Detail B Detail B	024-16497 024-16497	024-16498 024-16497	024-16499 024-16497
27	Outlet, Convenience	2 & 3	025-14023	025-14023	025-14023
28	Relay, Control (1R, 3R, 6R, 7R, 9R & 10R)	2 & 3	024-16395-027	024-16395-027	024-16395-027
29	Relay, Control (4R)	2 & 3	024-17020	024-17020	024-17020
30	Relay, Lockout (5R)	2 & 3	024-12066	024-12066	024-12066
31	Relay, Control (12R thru 15R)	2 & 3	024-16018	024-16018	024-16018
32	Relay, Control (16R)	2 & 3	024-11634	024-11634	024-11634
33	Relay, Control (17R & 18R)	4	024-12224	024-12224	024-12224
34	Relay, Control (19R)	4	024-17020	024-17020	024-17020
35	Relay, Control (20R)	4	024-16595	024-16595	024-16595
36	Relay, Time Delay, Part Winding Start (2TR & 5TR)	2	024-16687	024-16687	024-16687
37	Sensor (For Item 41)	Not Shown	025-16782-007	025-16782-007	025-16782-007
38	Sensor, Fan Speed Control (For Item 17)	Not Shown	025-17108	025-17108	025-17108
39	Switch, Toggle (S)	1	366-44750	366-44750	366-44750
40	Thermostat (1TH)	2 & 3	025-16002	025-16002	025-16002
41	Thermostat (2TH) TC-2	2 & 3	025-16782-003	025-16782-003	025-16782-003
42	Thermostat, Cooler Heater (3TH)	2 & 3	025-17622	025-17622	025-17622
43	Thermostat, Outside Ambient, Honeywell (4TH)	2 & 3	025-16785	025-16785	025-16785
44*	Thermostat, Discharge Temperature (5TH & 6TH)	Not Shown	025-09776	025-09776	025-09776
45	Timer, Anti-Recycling (1TR) (#1)	2 & 3	325-17221-002	325-17221-002	325-17221-002
46	Timer, Anti-Recycling (4TR) (#2)	2 & 3	325-17222-002	325-17222-002	325-17222-002
47	Timer, Pumpdown (7TR & 8TR)	4	025-17460	025-17460	025-17460
48	Transformer, Solid State Control (20VA)	2 & 3	325-16684	325-16684	325-16684
49	Transformer (3KVA)	3	025-11883	025-11883	025-16720

* For complete listing of renewal parts available for compressor repair, see Form 180.40-RP.

¹ Part numbers also apply to 200-3-50 model (-61A).

² Part numbers also apply to 400-3-50 model (-67A).

025-18705
Russell Hewlett