



Item No.	Description	Part No.			
		LCHA55	LCHA65	LCHA85	LCHA95
1	Panel, Side, End (4 Req'd.)	066-59838	066-59838	066-58256	066-58256
2	Panel, Side, Center (2 Req'd.)	066-58301	066-59492	066-59492	066-59492
3	Panel, End, Rear	066-58305	066-58305	066-58305	066-58305
4	Panel, Access, Power Panel	066-60765	066-60765	066-60765	066-60765
5	Panel, Access, Control Panel (C only)	366-83923	366-83923	366-83923	366-83923
	Panel, Access, Control Panel (D only)	366-89304	366-89304	366-89304	366-89304
6	Panel, Top	066-58716	066-58716	066-58716	066-58716
7	Panel, Comp. Compartment	366-71651	366-71651	366-71651	366-71651
8	Handle	029-08701	029-08701	029-08701	029-08701
9	Screw (2/Handle)	021-03745	021-03745	021-03745	021-03745
10	Door, Plexiglas (C only)	028-10028	028-10028	028-10028	028-10028
	Door, Plexiglas (D only)	028-10488	028-10488	028-10488	028-10488
11	Handle	066-83927	066-83927	066-83927	066-83927
12	Screw	021-01722	021-01722	021-01722	021-01722
13	Nut, Hex	021-09991	021-09991	021-09991	021-09991
14	Lockwasher	021-13862	021-13862	021-13862	021-13862
15*	Flow Switch	024-15793	024-15793	024-15793	024-15793

* Not Shown

FIG. 1 — EXTERIOR COMPONENTS