


LCHA20,25,35

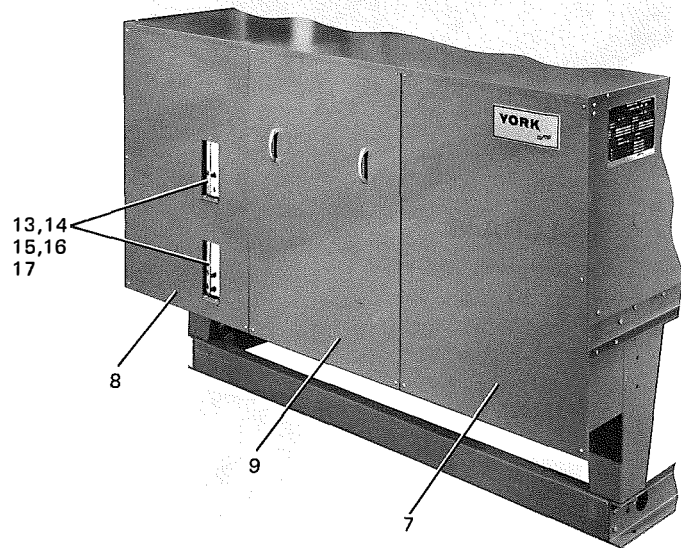

LCHA45

Item No.	Description	Part No.			
		LCHA20	LCHA25	LCHA35	LCHA45
1	Panel, Comp. End (L.H.)	066-85024	066-85516	066-85518	066-84280
2	Panel, Comp. (Top)	066-85025	066-85529	066-85530	066-84282
3	Panel, Side (L.H.)	363-67229	363-66874	363-68333	366-86907
4	Panel, End	063-67224	062-94531	063-68383	066-86915
5	Panel, Side (R.H.)	363-67230	363-66866	363-68330	366-86909
6	Panel, Comp. End (R.H.)	066-85023	066-85515	066-85517	066-84281
7	Panel, Front (R.H.)	066-85272	066-85570	066-85571	066-84941
8	Panel, Front (L.H.)	366-85267	366-85564	366-85565	366-84944
9	Panel, Front (Center)	—	—	—	066-84942
10	Handle	029-08701	029-08701	029-08701	029-08701
11	Screw (2/Handle)	021-03745	021-03745	021-03745	021-03745
12	Lockwasher (2/Handle)	021-01136	021-01136	021-01136	021-01136
13	Door, Plexiglas	028-10082	028-10082	028-10082	028-10079
14	Handle	066-83927	066-83927	066-83927	066-84935
15	Screw	021-10713	021-10713	021-10713	021-13725
16	Nut, Hex	021-08282	021-08282	021-08282	021-08282
17	Lockwasher	021-11533	021-11533	021-11533	021-11533
18*	Flow Switch	024-15793	024-15793	024-15793	024-15793

* Not Shown

FIG. 1— EXTERIOR COMPONENTS