

TABLE 9— CONTENT OF PUMP ISOLATION KITS

Component Parts	Part No.	Pump Isolation Kits (Quantity Required Per Kit)											
		366-53809	366-53810	366-53811	366-53812	366-53813	366-53814	366-53815	366-53816	366-53817	366-53818	366-53819	366-53820
Stopper Ass'y.—2"	366-49819	2	1	—	—	—	—	—	—	—	—	—	—
Stopper Ass'y.—2-1/2"	366-49820	—	—	1	—	—	—	1	—	1	—	—	—
Stopper Ass'y.—3"	366-49821	—	—	—	1	—	1	1	—	1	—	—	—
Stopper Ass'y.—3-1/2"	366-53570	—	—	—	—	1	—	—	1	—	—	—	—
Stopper Ass'y.—4"	366-49822	1	1	1	1	1	—	—	—	—	1	1	—
Stopper Ass'y.—6"	366-49823	—	—	—	—	—	1	1	1	1	1	—	1
Gasket 1/8 x 6 x 6	067-53559	1	1	1	1	1	—	—	—	—	—	1	—
Gasket 1/8 x 9 x 9	070-12519	1	1	1	1	1	—	—	—	—	—	1	—
Gasket 1/8 x 3 x 3	067-63255	1	1	1	1	1	1	1	1	1	1	1	1
Gasket 1/8 x 4-1/4 x 4-1/4	067-45545	1	1	1	1	1	1	1	1	1	1	1	1
Gasket 1/8 x 7-1/2 x 7-1/2	067-53560	—	—	—	—	—	—	1	1	1	1	—	1
Gasket 1/8 x 11 x 11	067-58740	—	—	—	—	—	—	1	1	1	1	—	1
Cu. Tubing 3/8 x .03 x 32	063-47667	1	1	1	1	1	1	1	1	1	1	1	1
Plastic Tubing 3/8 x 1/2 x 48	066-53915	1	—	—	—	—	—	—	—	—	—	—	—
Plastic Tubing 3/8 x 1/2 x 48	066-53916	—	1	1	—	—	—	1	—	1	—	1	—
Plastic Tubing 3/8 x 1/2 x 48	066-53917	—	—	—	—	1	—	—	1	—	1	—	1
Air Pump	026-19316	1	1	1	1	1	1	1	1	1	1	1	1

TABLE 10— CONTENTS OF KITS

ITEM NO. 56 & 57	INTERNAL MOTOR THERMOSTAT KIT FOR ITEMS #37 THRU 51 (4 & 5 MTR & 7MTR) 1 — 194 F THERMOSTAT — POTTING COMPOUND	ITEM NO. 94	VACUUM PUMP SPARE PARTS KIT FOR ITEM #91 2 — FILTER ASSEMBLY 3 — BLADE SPRING 3 — OIL SEAL 3 — VALVE RUBBER H.V. 1 — LID GASKET 1 — OIL BOX GASKET 3 — SHAFT SEAL 1 — SIGHT GLASS 2 — END CAP 2 — SIGHT GLASS SEALING RING VOR 0011 3 — DISTRIBUTOR RUBBER — VITON 1 — DISTRIBUTOR SPRING 1 — DISTRIBUTOR GASKET 1 — FILTER SEAL 1 — BALLAST BODY SEALING RING 1 — BALLAST PISTON SEALING RING 1 — FLANGE SEALING RING 1 — NOZZLE SEAL — SELON MK.7 1 — PLUG SEAL — SELON MK.11 2 — PLUG SEAL, SELON MK.3 1 PR. — FERROBESTOS BLADE 1 — "V" BELT 2 — SPRING SUPPORT PIN
85	SOLENOID VALVE SPARE PARTS KIT FOR ITEM #84 (3 SOL) 1 — CORE SPRING ASSEMBLY 1 — BODY GASKET	86 & 120	REPLACEMENT SOLENOID COIL FOR ITEMS #84 & 119
88	FLOAT LEVEL SWITCH CONTACT ELEMENT FOR ITEM #87 (1F,2F) 1 — CONTACT ELEMENT WITH LEADS 1 — STRAIN RELIEF CONNECTOR	121	SOLENOID VALVE SPARE PARTS KIT FOR ITEM #119 (1 SOL) 1 — CORE SPRING ASSEMBLY 1 — BODY GASKET
92	VACUUM PUMP SPARE PARTS KIT FOR ITEM #89 2 — BLADE SPRING 3 — EXHAUST VALVE RUBBER 3 — WILSON SEAL RUBBER 1 — OIL BOX GASKET 1 — PLUG SEAL 1 — BALLAST SEAL 1 — FILTER SEAL 1 — BALLAST SPRING 1 — VOR 1119 TAILPIECE SEAL RING 3 — OIL SEAL 2 — PLUG SEAL 2 — END CAP 1 — SIGHT GLASS 2 — VOR 0011 SIGHT GLASS SEAL RING 1 — FILTER ASSEMBLY 1 — V-BELT 1 PR. — FERROBESTOS BLADES 1 — BALLAST FELT FILTER 2 — BLADE SPRING SUPPORT 1 — PRESSURE RELIEF VALVE SPRING 1 — VENT PLUG 3 — DISTRIBUTOR RUBBER 1 — DISTRIBUTOR SPRING	151	REPLACEMENT SOLENOID COIL FOR ITEM # 150
93	VACUUM PUMP SPARE PARTS KIT FOR ITEM #90 1 — FILTER SEAL 1 — SIGHT GLASS 2 — END CAP 2 — SIGHT GLASS SEAL RING 2 — BALLAST SPRING 1 — BALLAST SEAL 1 — BALLAST FELT FILTER 1 — PLUG SEAL 1 — FLANGE SEAL RING 2 — OIL BOX GASKET 2 — FILTER ASSEMBLY 3 — OIL SEAL 3 — BLADE SPRING 3 — DISTRIBUTOR RUBBER 1 — DISTRIBUTOR SPRING 3 — VALVE RUBBER 2 — PLUG SEAL 1 — VEE BELT 1 PR. — FERROBESTOS BLADE 3 — BLADE SPRING SUPPORT 1 — SEAL PLATE 2 — LIP SEAL	193	REPLACEMENT SOLENOID COIL FOR ITEM #191
		194	REPLACEMENT SOLENOID COIL FOR ITEM #192
		199	REPLACEMENT SOLENOID COIL FOR ITEM #197
		200	REPLACEMENT SOLENOID COIL FOR ITEM #198
		201	SPARE PARTS KIT FOR ITEM #197
		202	SPARE PARTS KIT FOR ITEM #198
		205	REPLACEMENT SOLUTION VALVE ACTUATOR FOR ITEM #204 (SCVM)
		207	REPLACEMENT STEAM VALVE ACTUATOR FOR ITEM #206 (SVM)
		222	REPLACEMENT DIAPHRAGM FOR 1/2" VALVE FOR ITEM #221
		224	REPLACEMENT DIAPHRAGM FOR 3/4" VALVE FOR ITEM #223
		257	THERMOMETER KIT "A" (OPTIONAL EXTRA) 4 — MERCURY THERMOMETERS (—30 TO 120 F) 4 — MERCURY THERMOMETERS (—4 TO 220 F) 1 — PRINT, INSTALLATION INSTRUCTION
		258	THERMOMETER KIT "B" (OPTIONAL EXTRA) 5 — DIAL THERMOMETERS (30 TO 130 F) 3 — SEPARABLE SOCKETS, 3/4" 2 — SEPARABLE SOCKETS, 3/4" — 2" EXT. 1 — PRINT, INSTALLATION INSTRUCTION



P.O. Box 1592, York, Pennsylvania USA 17405-1592
Copyright © by York International Corporation 1993
FORM 155.16-RP (473)



PRINTED ON RECYCLED PAPER



36USC380

Subject to change without notice. Printed in USA
ALL RIGHTS RESERVED
FAH 1M 793.60
CODES: ABS, SM