


| | | |
|---|-------------------------------|-----|
|  | Form No.: 160.00-RP3 (LS01) | 522 |
| | Supersedes: 160.00-RP3 (LS01) | 801 |
| LITERATURE SUPPLEMENT | File with: 160.00-RP3 | |
| Subject: Part Number Corrections for Style "B" Liquid Cooled Solid State Starter | | |

Background: When the spare parts book (160.00-RP3) for the Style ‘B’ Liquid Cooled Solid Start Starter was released a few parts were omitted, and a few part numbers were incorrect. The table below is the first section in the spare parts book. The changes are noted in bold italic type.

| ITEM NO. | DESCRIPTION | FIG. NO | PART NUMBER |
|-------------------------|---|---------|-----------------------------|
| | Common Parts for all Models | | |
| 1 | Logic / Trigger Board 60 Hz applications | 2 | <i>371-02757-002</i> |
| 1 | Logic / Trigger Board 50 Hz applications | 2 | <i>371-02757-003</i> |
| 2 | Capacitor, Assembly | 5 | 371-01086-000 |
| 3 | Fuseholder for 7FU | 3 | 025-34186-000 |
| 4 | Fuseholder for 1FU-6FU (1 of 2) | 3 | 025-34185-000 |
| 5 | Fuse, 4 Amp 7 FU | 3 | 025-27973-000 |
| 6 | Fastener, Panel Adj. | 1 | 021-17252-000 |
| 7 | Hose Barb, Plastic - Threads Into SCR Brick Assembly | 6 | <i>023-20205-000</i> |
| 8 | Hose, Clear Plastic order by the foot | 6 | 028-12239-000 |
| 9 | Coolant Header 3" PVC with Fill Plug | 6 | 371-02561-513 |
| 10 | Heat Exchanger | 6 | 026-36596-000 |
| Not Shown | Hose, connect heat exchanger to condenser water 150 Lb., 50 Ft Roll | | 028-11958-000 |
| <i>Not Shown</i> | <i>Hose, connect heat exchanger to condenser water 300 Lb., 50 Ft Roll</i> | | <i>028-11959-000</i> |
| 11 | Temperature Sensor kit (thermistor, lugs, and plug) | 5 | <i>371-02758-000</i> |
| 12 | U16 Logic / Trigger Board EPROM | 2 | 031-02029-002 |
| 13 | U15 Battery Backed RAM for the Logic / Trigger Board | 2 | 031-01620-000 |
| 14 | Coolant Pump 50 / 60 Hz | 6 | 026-32813-000 |
| Not Shown | Inhibitor, Coolant | | 013-04129-000 |