

TABLE 11 - VARIABLE PARTS FOR ALL 26LK MODELS

ITEM	DESCRIPTION	PART NUMBER			FIGURE
		26LK-17B	26LK-28B	26LK-40B	
20	SCR Assembly Kit 1 of 3	375-03048-006	375-03048-006	375-03048-006	4, 5
21	Fuse (1FU – 3FU)	025-34141-000	025-34141-000	025-34136-000	3
22	Fuse (4FU – 5FU)	025-34142-000	025-34142-000	025-34140-000	3
23	Fuse (6FU)	025-34142-000	025-34142-000	025-34142-000	3
24	Snubber Resistor	371-02564-002	371-02564-002	371-02564-003	5
25	Control Power Transformer	371-02569-002	371-02569-003	371-02569-006	1

TABLE 12 - VARIABLE PARTS FOR ALL 26LK MODELS (CONT'D)

ITEM	DESCRIPTION	PART NUMBER			FIGURE
		26LK-46B	26LK-58B	26LK-50B	
20	SCR Assembly Kit 1 of 3	375-03048-006	375-03048-007	375-03048-006	4, 5
21	Fuse (1FU – 3FU)	025-34136-000	025-34540-000	025-34136-000	3
22	Fuse (4FU – 5FU)	025-34139-000	025-34137-000	025-34140-000	3
23	Fuse (6FU)	025-34142-000	025-34142-000	025-34142-000	3
24	Snubber Resistor	371-02564-003	371-02564-004	371-02564-003	5
25	Control Power Transformer	371-02569-004	371-02569-005	371-02569-006	1

TABLE 13 - VARIABLE PARTS FOR ALL 33L MODELS

ITEM	DESCRIPTION	PART NUMBER			FIGURE
		33L-17B	33L-28B	33L-40B	
20	SCR Assembly Kit 1 of 3	375-03048-008	375-03048-008	375-03048-008	4, 5
21	Fuse (1FU – 3FU)	025-34140-000	025-34140-000	025-34136-000	3
22	Fuse (4FU – 5FU)	025-34141-000	025-34141-000	025-34137-000	3
23	Fuse (6FU)	025-34141-000	025-34141-000	025-34141-000	3
24	Snubber Resistor	371-02564-002	371-02564-002	371-02564-003	5
25	Control Power Transformer	375-02568-002	375-02568-003	375-02568-006	1

TABLE 14 - VARIABLE PARTS FOR ALL 33L MODELS (CONT'D)

ITEM	DESCRIPTION	PART NUMBER		FIGURE
		33L-46B	33L-50B	
20	SCR Assembly Kit 1 of 3	375-03048-008	375-03048-008	4, 5
21	Fuse (1FU – 3FU)	025-34135-000	025-34136-000	3
22	Fuse (4FU – 5FU)	025-34136-000	025-34137-000	3
23	Fuse (6FU)	025-34141-000	025-34141-000	3
24	Snubber Resistor	371-02564-003	371-02564-003	5
25	Control Power Transformer	375-02568-004	375-02568-006	1