

TABLE 15 - VARIABLE PARTS FOR ALL 33LK MODELS

ITEM	DESCRIPTION	PART NUMBER			FIGURE
		33LK-17B	33LK-28B	33LK-40B	
20	SCR Assembly 1 of 3	375-03048-008	375-03048-008	375-03048-008	4, 5
21	Fuse (1FU – 3FU)	025-34141-000	025-34141-000	025-34136-000	3
22	Fuse (4FU – 5FU)	025-34142-000	025-34142-000	025-34140-000	3
23	Fuse (6FU)	025-34142-000	025-34142-000	025-34142-000	3
24	Snubber Resistor	371-02564-002	371-02564-002	371-02564-003	5
25	Control Power Transformer	371-02569-002	371-02569-003	371-02569-006	1

TABLE 16 - VARIABLE PARTS FOR ALL 33LK MODELS (CONT'D)

ITEM	DESCRIPTION	PART NUMBER		FIGURE
		33LK-46B	33LK-50B	
20	SCR Assembly 1 of 3	375-03048-008	375-03048-008	4, 5
21	Fuse (1FU – 3FU)	025-34136-000	025-34136-000	3
22	Fuse (4FU – 5FU)	025-34139-000	025-34140-000	3
23	Fuse (6FU)	025-34142-000	025-34142-000	3
24	Snubber Resistor	371-02564-003	371-02564-003	5
25	Control Power Transformer	371-02569-004	371-02569-006	1