

ELECTRICAL AND PNEUMATIC COMPONENTS



FIG. 8—LOW WATER TEMPERATURE THERMOSTAT

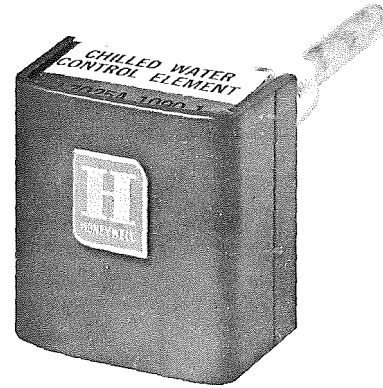


FIG. 9—TEMPERATURE CONTROL SENSOR

FIG. 10—LOW WATER TEMPERATURE TRANSMITTER
PNEUMATIC PRV CONTROL UNITS ONLY

Item	Description	Quan.	Part No.	Fig.
1	Low Water Temperature Thermostat Penn-A 19ABC-23-Range 20° F to 80° F	1	025-14464*	8
2	Temperature Control Sensor Honeywell-7025A-1090	1	025-10439	9
3	Low Water Temperature Transmitter Johnson Service-T-5210-134 Range 32° F –57° F (Pneumatic Control Only)	1	022-03481	10

* Use same thermostat for LWT(S)