

HERMETIC MOTOR CURRENT TRANSFORMER ASSEMBLY [Electro Mechanical Started Units]

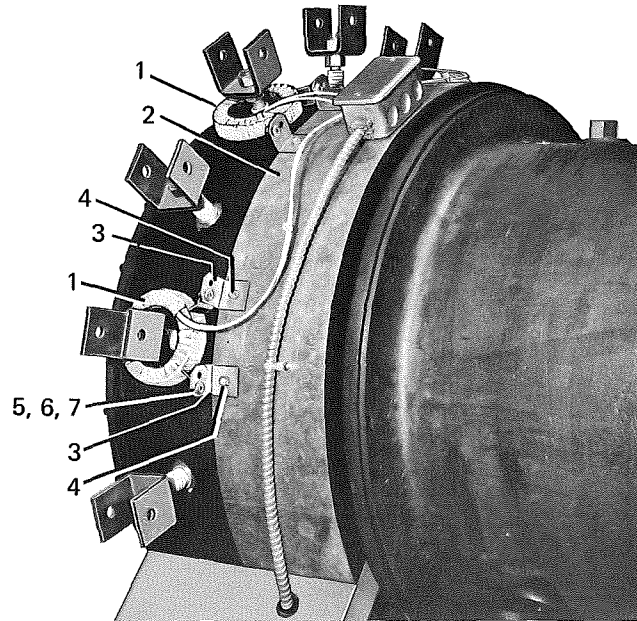


FIG. 18 — CURRENT TRANSFORMER ARRANGEMENT — LOW VOLTAGE

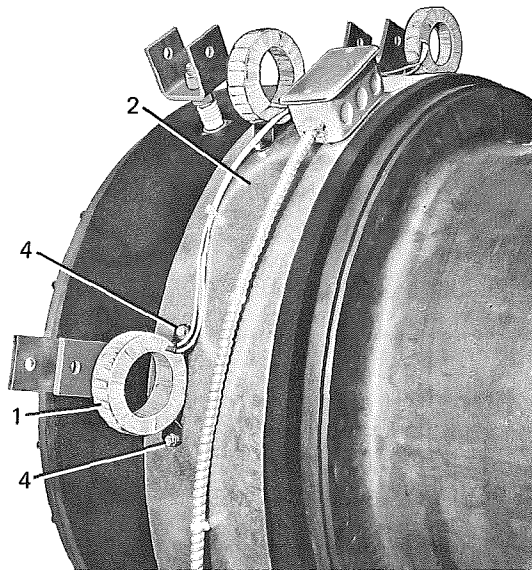


FIG. 19 — CURRENT TRANSFORMER ARRANGEMENT — HIGH VOLTAGE

| Item | Description | Qty. | 364-45881 | | 364-45881 | | 364-45881 | | 364-45881 | | 364-45881 | | |
|------|---------------------|------|-------------------|------|-------------------|------|-------------------|------|-------------------|------|-------------------|------|-------------------|
| | | | -002 | Qty. | -002 | Qty. | -002 | Qty. | -002 | Qty. | -002 | Qty. | -002 |
| | | | L.V. 200:1 | | L.V. 350:1 | | L.V. 700:1 | | L.V. 1400:1 | | H.V. 200:1 | | H.V. 350:1 |
| 1 | Current Transformer | 3 | 025-21173 -001 | 3 | 025-21173 -002 | 3 | 025-21173 -003 | 3 | 025-21173 -004 | 3 | 025-21173 -001 | 3 | 025-21173 -002 |
| 2 | Bracket | 1 | 064-45867 | 1 | 064-45867 | 1 | 064-45867 | 1 | 064-45867 | 1 | 064-45868 | 1 | 064-45868 |
| 3 | Bracket, Angle | 6 | 064-45882 | 6 | 064-45882 | 6 | 064-45882 | 6 | 064-45882 | — | — | — | — |
| 4 | Scr Self Tap 1/4 | 6 | 021-13774 | 6 | 021-13774 | 6 | 021-13774 | 6 | 021-13774 | 6 | 021-13774 | 6 | 021-13774 |
| 5 | Scr Cap 1/4 x 1/2 | 6 | 021-01366 | 6 | 021-01366 | 6 | 021-01366 | 6 | 021-01366 | — | — | — | — |
| 6 | Nut | 6 | 021-00450 | 6 | 021-00450 | 6 | 021-00450 | 6 | 021-00450 | — | — | — | — |
| 7 | Lockwasher | 6 | 021-05289 | 6 | 021-05289 | 6 | 021-05289 | 6 | 021-05289 | — | — | — | — |