

**CONTROL CENTER VARIATIONS AND  
PART NUMBERS**

| CONTROL CENTER VARIATION   | MODEL TURBOPAK | OIL PUMP VOLTS-PHASE-HERTZ          | CONTROL CENTER PART NUMBER |      |  |      |
|--|----------------|-------------------------------------|----------------------------|------|--|------|
|  |                |                                     | MANUAL RESTART             |      | AUTOMATIC RESTART                                  |      |
| For use with electro mechanical starter low voltage (208V-600V) motors           | HT/OT<br>YT    | 208, 220, 230<br>240-3-60           | 366-82177-047              |      | 366-82177-052                                      |      |
|  |                | 440, 460<br>480-3-60                |                            | -048 |  | -053 |
|  |                | 550,575,600-3-60                    |                            | -049 |  | -054 |
|  |                | 380, 416-3-60<br>380, 400, 415-3-50 |                            | -050 |  | -055 |
|  |                | 220-3-50                            |                            | -043 |  | -045 |
|  |                | 346-3-50                            |                            | -051 |  | -056 |
|  |                | 440-3-50                            |                            | -044 |  | -046 |
| High voltage (2300V-4160V)<br>For use with electro mechanical starter            | HT             | 208, 220<br>230, 240-3-60           |                            | -011 |  | -016 |
|  |                | 440, 460, 480-3-60                  |                            | -012 |  | -017 |
|  |                | 550, 575, 600-3-60                  |                            | -013 |  | -018 |
|  |                | 380, 416-3-60<br>380, 400, 415-3-60 |                            | -014 |  | -019 |
|  |                | 220-3-50                            |                            | -009 |  | -021 |
|  |                | 346-3-50                            |                            | -015 |  | -020 |
|  |                | 440-3-50                            |                            | -010 |  | -022 |
| For use with Solid State Starter (low voltage 206V-600V motors)                  | HT/OT          | 208, 220, 230,<br>240-3-60          |                            | -029 |  | -033 |
|  |                | 440, 460, 480-3-60                  |                            | -030 |  | -034 |
|  |                | 550, 575, 600-3-60                  |                            | -031 |  | -035 |
|  |                | 380, 400, 415-3-50                  |                            | -032 |  | -036 |
| For use with Solid State Starter with transformer (low voltage 208V-600V motors) | HT/OT          | 208-3-60                            |                            | -057 |  | -061 |
|  |                | 440, 460, 480-3-60                  |                            | -058 |  | -062 |
|  |                | 550, 575, 600-3-60                  |                            | -059 |  | -063 |
|  |                | 380, 400, 415-3-60                  |                            | -060 |  | -064 |
|  |                | 220, 230, 240-3-60                  |                            | -065 |  | -066 |
| For use with Solid State Starter with transformer                                | HY/YT          | 208-3-60                            |                            | -177 | Separate Automatic Restart Kit Part No. 366-89592A |      |
|  |                | 440, 460, 480-3-60                  |                            | -178 |  |      |
|  |                | 550, 575, 600-3-60                  |                            | -179 |  |      |
|  |                | 380, 400, 415-3-60                  |                            | -180 |  |      |
|  |                | 220, 230, 240-3-60                  |                            | -181 |  |      |