



FIG. 4 –AUXILIARY CONTROL COMPARTMENT – PANEL REMOVED

VARIABLE PARTS

ITEM	DESCRIPTION	MODEL HT-MANUAL RESTART - with HMT MODULE		MODEL HT-AUTO. RESTART - with HMT MODULE		MODEL HT,OT or YT with SOLID STATE STARTER MANUAL RESTART		SEE FIG.
		PART NO.	QUAN.	PART NO.	QUAN.	PART NO.	QUAN.	
31	Plug, Electrical (2-Pin)	025-19672	1	025-19672	1	-	-	4
32	Control, Current Module (CM)	031-00081-001	1	031-00081-001	1	-	-	3
33	Resistor	025-20789	2	025-20739	1	-	-	3 & 6
34	Diode, Bridge	031-00210	1	031-00210	1	-	-	3 & 6
35	Connector	025-14461	3	-	-	025-14461	3	3 & 6
36	Nut, Expansion	-	-	021-13017	4	-	-	3
37	Control (Under Voltage Relay)	-	-	031-00082	1	-	-	3 & 6
38	Relay - (14R)	-	-	024-20089	1	-	-	3 & 5
39	Module - (HMT)	025-20791-003	1	025-20791-003	1	-	-	4
40	Block Terminal (3TB)	025-18867	6	025-18867	6	025-18867	2	4
41	Block Terminal End (3TB)	025-13981	1	025-13981	1	025-13981	1	4
42	Strip, Marker (3TB)	025-20904	1	025-20904	1	025-20981	1	4
43	Terminal	025-06642	4	025-06642	4	-	-	4
44	Relay - (15R)	-	-	024-18784	1	-	-	3 & 5

ITEM	DESCRIPTION	MODEL HT,OT or YT with SOLID STATE STARTER AUTO. RESTART		MODEL HT, OT or YT with MANUAL RESTART		MODEL HT or OT with AUTO. RESTART		SEE FIG.
		PART NO.	QUAN.	PART NO.	QUAN.	PART NO.	QUAN.	
31	Plug, Electrical (2-Pin)	-	-	025-19672	1	025-19672	1	4
32	Control, Current Module (CM)	-	-	031-00081-001	1	031-00081-001	1	3
33	Resistor	-	-	025-20789	2	025-20789	2	3 & 6
34	Diode, Bridge	-	-	031-00210	1	031-00210	1	3 & 6
35	Connector	-	-	025-14461	3	-	-	3 & 6
36	Nut, Expansion	021-13017	4	-	-	-	-	3
37	Control (Under Voltage Relay)	031-00082	1	-	-	031-00082	1	3 & 6
38	Relay - (14R)	024-20089	1	-	-	024-20089	1	3 & 5
39	Module - (HMT)	-	-	-	-	-	-	4
40	Block Terminal	025-18867	2	025-18867	2	025-18867	2	4
41	Block Terminal End	025-13981	1	025-13981	1	025-13981	1	4
42	Strip, Marker	025-20981	1	025-20981	1	025-20981	1	4
43	Terminal	-	-	-	-	-	-	4
44	Relay - (15R)	024-18784	1	-	-	024-18784	-	3 & 5