

SOLID STATE START VARIABLE PARTS

ITEM	DESCRIPTION	SSS-9E-17A		SSS-9E-28A		SSS-9E-46A		SSS-9E-58A		SSS-9E-50A		SEE FIG.
		PART NO.	QUAN.	PART NO.	QUAN.	PART NO.	QUAN.	PART NO.	QUAN.	PART NO.	QUAN.	
31	Switch, (SCR - Head Sink)	371-00328-001	3	371-00328-005	3	371-00328-006	3	371-00328-007	3	371-00328-006	3	1
32	Door	371-00337	1	371-00337	1	371-00335	1	371-00335	1	371-00336	1	2 & 3
33	Current, Transformer (Feedback)	025-18960	3	025-18960	3	025-18960	3	025-18960	3	025-18960	3	3
34	Gate Driver Transformer-30WYE	325-20947-001	1	315-20948-002	1	325-20948-001	1	325-20950-001	1	325-20949-001	1	2
35	Control, High Voltage	031-00220-001	1	031-220-001	1	031-00220-002	1	031-00220-003	1	031-00220-002	1	2
36	Control, DV/DT	031-00010-001	3	031-00010-001	3	031-00010-002	3	031-00010-003	3	031-00010-002	3	6
37	Control, Logic	031-00221-002	1	031-00221-002	1	031-00221-002	1	031-00221-002	1	031-00221-002	1	2
38	Fuse	025-20977	3	025-20977	3	025-20975	3	025-20975	3	025-20976	3	1 & 2
39	Temperature Control	031-00049-001	1	031-00049-001	1	031-00049-001	1	031-00049-001	1	031-00049-001	1	2
40	Ammeter	025-20957	1	025-20957	1	025-20957	1	025-20957	1	025-20957	1	1
41	Lug, Terminal	025-19698	18	025-19698	18	025-19698	18	025-19698	18	025-19698	18	5

ITEM	DESCRIPTION	SSS-7E-17A		SSS-7E-28A		SSS-7E-40A		SSS-7E-58A		SSS-7E-50A		SEE FIG.
		PART NO.	QUAN.	PART NO.	QUAN.	PART NO.	QUAN.	PART NO.	QUAN.	PART NO.	QUAN.	
31	Switch, (SCR - Head Sink)	371-00328-002	3	371-00328-002	3	371-00328-003	3	371-00328-004	3	371-00328-003	3	1
32	Door	371-00337	1	371-00337	1	371-00335	1	371-00335	1	371-00336	1	2 & 3
33	Current, Transformer (Feedback)	025-19307	3	025-19307	3	025-19307	3	025-19307	3	025-19307	3	3
34	Gate Driver Transformer-30WYE	325-20947-001	1	315-20948-002	1	325-20948-001	1	325-20950-001	1	325-20949-001	1	2
35	Control, High Voltage	031-00220-001	1	031-00220-001	1	031-00220-002	1	031-00220-003	1	031-00220-002	1	2
36	Control, DV/DT	031-00010-001	3	031-00010-001	3	031-00010-002	3	031-00010-003	3	031-00010-002	3	6
37	Control, Logic	031-00221-001	1	031-00221-001	1	031-00221-001	1	031-00221-001	1	031-00221-001	1	2
38	Fuse	025-20977	3	025-20977	3	025-20975	3	025-20975	3	025-20976	3	1 & 2
39	Temperature Control	031-00049-001	1	031-00049-001	1	031-00049-001	1	031-00049-001	1	031-00049-001	1	2
40	Ammeter	025-20956	1	025-20956	1	025-20956	1	025-20956	1	025-20956	1	1
41	Lug, Terminal	025-19698	12	025-19698	12	025-19698	12	025-19698	12	025-19698	12	5

ITEM	DESCRIPTION	SSS-14E-17A		SSS-14E-28A		SSS-14E-46A		SSS-14E-58A		SSS-14E-50A		SEE FIG.
		PART NO.	QUAN.	PART NO.	QUAN.	PART NO.	QUAN.	PART NO.	QUAN.	PART NO.	QUAN.	
31	Switch, (SCR - Head Sink)	371-00328-008	3	371-00328-008	3	371-00328-009	3	371-00328-010	3	371-00328-009	3	1
32	Door	371-00337	1	371-00337	1	371-00335	1	371-00335	1	371-00336	1	2 & 3
33	Current, Transformer (Feedback)	025-18960	3	025-18960	3	025-18960	3	025-18960	3	025-18960	3	3
34	Gate Driver Transformer-30WYE	325-20947-001	1	315-20948-002	1	325-20948-001	1	325-20950-001	1	325-20949-001	1	2
35	Control, High Voltage	031-00220-001	1	031-00220-001	1	031-00220-002	1	031-00220-003	1	031-00220-002	1	2
36	Control, DV/DT	031-00010-001	3	031-00010-001	3	031-00010-002	3	031-00010-003	3	031-00010-002	3	6
37	Control, Logic	031-00221-003	1	031-00221-003	1	031-00221-003	1	031-00221-003	1	031-00221-003	1	2
38	Fuse	025-20977	3	025-20977	3	025-20975	3	025-20975	3	025-20976	3	1 & 2
39	Temperature Control	031-00049-002	1	031-00049-002	1	031-00049-002	1	031-00049-002	1	031-00049-002	1	2
40	Ammeter	025-20957	1	025-20957	1	025-20957	1	025-20957	1	025-20957	1	1
41	Lug, Terminal	025-19698	18	025-19698	18	025-19698	18	025-19698	18	025-19698	18	5