



Item	Description	Quan.	Part No.
1	Bracket, Mounting P.R.V. Motor	1	064-39185
2	Lever, P.R.V. External	1	364-28252
3	Link, External P.R.V. Motor	1	064-39186
4	Link, External P.R.V. Motor	1	064-28237
5	Lever, P.R.V. Motor	1	064-39187
6	Screw, Cap 12 Pt. Hd. 3/8-16 X 1-1/8 Lg.	6	021-11148
7	Screw, Cap Hex. Hd. 1/4-20 X 1 Lg.	2	021-11914
8	Bolt, Shoulder 1/4-20 X 1-5/8 Lg.	1	064-28286
9	Screw, Set Hex. Soc. #10-24 X 3/8 Lg.	1	021-03910
10	Bolt, Shoulder 1/4-20 X 1-3/8 Lg.	1	064-28262
11	Nut, Hex 1/4-20 UNC	6	021-00450
12	Washer, Plain 9/32 I.D.	6	021-05165
13	Lockwasher, Spring 1/4	2	021-05267
14	Ring, Fill	1	064-29258
15	Sealer, Grade CV	.010	013-01678

NOTE: VIEW SHOWING LINKAGE IN CLOSED POSITION. VANES MUST BE FULLY CLOSED WHEN MOTOR IS AT ITS CCW STOP (FACING CRANK ARM END) POSITION. VANE MUST TRAVEL TO OPEN OR BEYOND AT THE EXTREME CW MOTOR POSITION.

FIG. 10 — PRV PNEUMATIC EXTERNAL LINKAGE