

# ELECTRICAL AND PNEUMATIC COMPONENTS

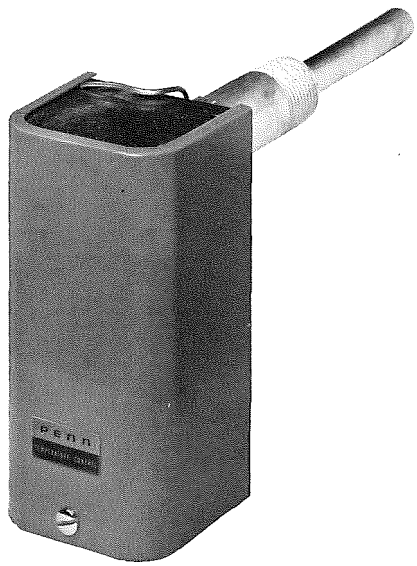


FIG. 7 – LOW WATER TEMPERATURE THERMOSTAT

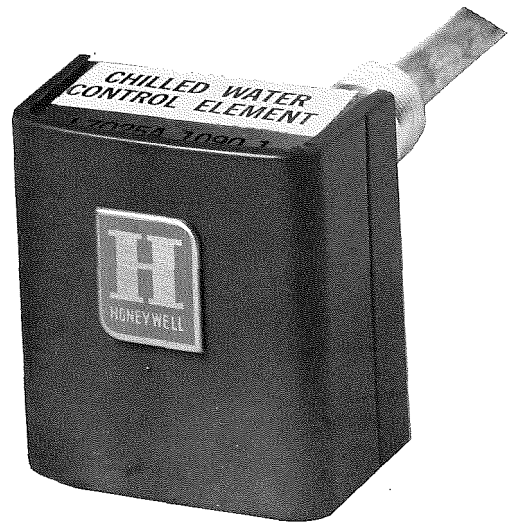


FIG. 8 – TEMPERATURE CONTROL SENSOR

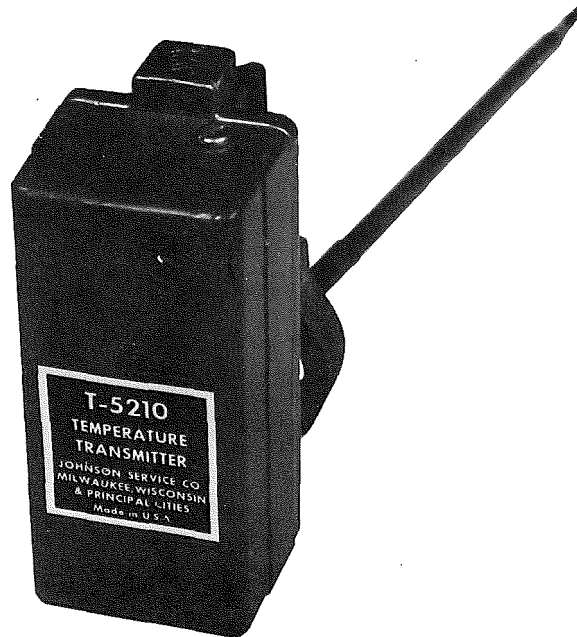


FIG. 9 – LOW WATER TEMPERATURE TRANSMITTER  
PNEUMATIC PRV CONTROL UNITS ONLY

Item	Description	Quan.	Part No.	Fig.
1	Low Water Temperature Thermostat Penn-A 19ABC-23-Range 20°F to 80°F	1	025-14464*	8
2	Temperature Control Sensor Honeywell-7025A-1090	1	025-10439	9
3	Low Water Temperature Transmitter Johnson Service-T-5210-134 Range 32°F –57°F (Pneumatic Control Only)	1	022-03481	10

\* Use same thermostat for LWT(S)