

OPEN COMPRESSOR PARTS LIST

ITEM NO.	DESCRIPTION	MODEL 53-59		MODEL 67-76		MODEL 85-95		MODEL 108-120	
		YORK PART NO.	QUAN.	YORK PART NO.	QUAN.	YORK PART NO.	QUAN.	YORK PART NO.	QUAN.
1	ROTOR, SCROLL HOUSING	064-21048	1	064-11633	1	064-12167	1	SEE TABLE 4	1
2	PREROTATION VANE ASSEMBLY	SEE TABLE 1	1	SEE TABLE 2	1	SEE TABLE 3	1	SEE TABLE 4	1
3	NOZZLE PLATE BASE	SEE TABLE 1	1	SEE TABLE 2	1	SEE TABLE 3	1	SEE TABLE 4	1
4	RETAINER NOZZLE BASE PLATE	—	—	—	—	—	—	SEE TABLE 4	1
5	GASKET RETAINER TO NOZZLE BASE PLATE	—	—	—	—	—	—	SEE TABLE 4	1
6	IMPELLER SEAL RING	SEE TABLE 1	1	SEE TABLE 2	1	SEE TABLE 3	1	SEE TABLE 4	1
7	FLAT SPRING WASHER	064-13817	1	SEE TABLE 2	1	SEE TABLE 3	1	SEE TABLE 4	1
8	RETAINING RING, IMPELLER SEAL-INTERNAL	029-08311	1	SEE TABLE 2	1	SEE TABLE 3	1	—	—
9	DEFUSER PLATE	SEE TABLE 1	1	SEE TABLE 2	1	SEE TABLE 2	1	SEE TABLE 4	1
10	ROTOR SUPPORT	064-19267	1	064-19266	1	064-19265	1	064-22793	1
11	MAIN SHAFT BEARING	†064-09241	1	■ 064-11642	1	● 064-21465	1	★ 064-22678	1
12	ROLL PIN, 1/8 DIA. X 9/16 LG.	†029-03990	1	■ 029-03990	1	● 029-03990	1	★ 029-03990	1
13	PINION GEAR BEARING	†064-12285	1	■ 064-11643	1	● 064-11643	1	★ 064-22663	1
14	RETAINING RING INTERNAL	029-07213	1	029-08496	1	029-08496	1	029-08780	1
15	BEARING GEAR FRONT	†064-13837	1	■ 064-13845	1	● 064-13845	1	★ 064-22677	1
16	DRIVE, GEAR	SEE COMPR. NAME PLATE	1	SEE COMPR. NAME PLATE	1	SEE COMPR. NAME PLATE	1	SEE COMPR. NAME PLATE	1
17	PINION GEAR	SEE COMPR. NAME PLATE	1	SEE COMPR. NAME PLATE	1	SEE COMPR. NAME PLATE	1	SEE COMPR. NAME PLATE	1
18	DRIVE SHAFT	064-15471	1	064-14971	1	064-14971	1	064-20142	1
19	BEARING HOUSING	064-12263	1	064-11641	1	064-15522	1	064-27733	1
20	REAR GEAR BEARING	†064-12288	1	■ 064-11665	1	● 064-11665	1	★ 064-22675	1
21	INTERNAL RETAINING RING	029-08321	1	029-06722	1	029-06722	1	029-08604	1
22	"O" RING	⊕ 028-04408	—	● 028-04348	1	● 028-04348	1	★ 028-05184	2
23	SHAFT SEAL COLLAR	⊕ 064-12318-005	1	● 064-12318-007	1	● 064-12318-007	1	★ 064-16649-011	1
24	THRUST BEARING	†064-12284	1	■ 064-11644	1	● 064-11644	1	★ 064-22662	1
25	THRUST COLLAR - HIGH SPEED OIL PUMP	†064-09587	1	■ 064-11654	1	SEE TABLE 3	1	★ 064-22713	1
26	"O" RING	⊕ †028-04409	1	■ 028-04352	1	● 028-04352	1	★ 028-04517	1
27	OIL PUMP COVER - HIGH SPEED	064-12317	1	064-11660	1	064-11660	1	064-22707	1
28	PRESSURE PLATE - OIL PUMP H. S.	064-12548	1	064-11819	1	064-11819	1	064-22984	1
29	INSERT PIN - 3/16 DIA. X 1/2 LG.	029-04138	3	029-04138	2	029-04138	2	029-04138	2
30	BEARING HOUSING GASKET	†064-12414	1	■ 064-11802	1	● 064-15515	1	★ 064-23024	1
31	"O" RING	†028-04989	1	■ 028-05401	1	● 028-05401	1	—	—
32	"O" RING - DRIVE SHAFT	SEE TABLE 1	1	—	—	—	—	★ 028-04478	1
33	VOLUTE RING, LOW SPEED PUMP	—	—	—	—	● 064-21467	1	★ 064-13695	1
34	INSERT PIN	—	—	—	—	029-07014	1	029-06863	1
35	OIL PUMP, LOW SPEED	064-13828	1	064-13841	1	064-15509	1	064-13911	1

† PARTS INCLUDED IN FIELD REPLACEMENT KIT - MODELS LTD53 & LTD59 - PART NO. 464-29624

■ PARTS INCLUDED IN FIELD REPLACEMENT KIT - MODELS LTD67 & LTD76 - PART NO. 464-29626

● PARTS INCLUDED IN FIELD REPLACEMENT KIT - MODELS LTD85 & LTD95 - PART NO. 464-29628

★ PARTS INCLUDED IN FIELD REPLACEMENT KIT - MODELS LTD108 & LTD120 - PART NO. 464-29630

⊕ PARTS INCLUDED IN SHAFT SEAL KIT - PART NO. 464-24257

● PARTS INCLUDED IN SHAFT SEAL KIT - PART NO. 464-24258

● PARTS INCLUDED IN SHAFT SEAL KIT - PART NO. 464-24258

★ PARTS INCLUDED IN SHAFT SEAL KIT - PART NO. 464-29632