

OPEN COMPRESSOR PARTS LIST

Item No.	Description	Model LTD 53 -- 59		Model LTD 67 -- 76		Model LTD 85 -- 95		Model LTD 108 -- 120 -- 126	
		YORK Part No.	Quan.	YORK Part No.	Quan.	YORK Part No.	Quan.	YORK Part No.	Quan.
1	Rotor, Scroll Housing	064-32534	1	064-32513	1	064-12167	1	See Table 4	1
2	Prerotation Vane Assembly	See Table 1	1	See Table 2	1	See Table 3	1	See Table 4	1
3	Nozzle Plate Base	See Table 1	1	See Table 2	1	See Table 3	1	See Table 4	1
4	Retainer Nozzle Base Plate	—	—	—	—	—	—	See Table 4	1
5	Gasket Retainer to Nozzle Base Plate	—	—	—	—	—	—	See Table 4	1
6	Impeller Seal Ring	See Table 1	1	See Table 2	1	See Table 3	1	See Table 4	1
7	Flat Spring Washer	064-13817	1	See Table 2	1	See Table 3	1	See Table 4	1
8	Retaining Ring, Impeller Seal-Internal	029-08311	1	See Table 2	1	See Table 3	1	—	—
9	Defuser Plate	See Table 1	1	See Table 2	1	See Table 3	1	See Table 4	1
10	Rotor Support/with Bearing Housing	364-39314	1	364-39316	1	364-39318	1	364-39320	1
11	Main Shaft Bearing	† 064-09241	1	■ 064-11642	1	● 064-21465	1	★ 064-22678	1
12	Roll Pin, 1/8 Dia. x 9/16 Lg.	† 029-03990	1	■ 029-03990	1	● 029-03990	1	★ 029-03990	1
13	Pinion Gear Bearing	† 064-12285	1	● 064-11643	1	● 064-11643	1	★ 064-22663	1
14	Retaining Ring Internal	029-07213	1	029-08496	1	029-08496	1	029-08780	1
15	Bearing Gear Front	† 064-13837	1	■ 064-13845	1	● 064-13845	1	★ 064-22677	1
16	Drive, Gear	See Compr. Name Plate	1	See Compr. Name Plate	1	See Compr. Name Plate	1	See Compr. Name Plate	1
17	Pinion Gear	See Compr. Name Plate	1	See Compr. Name Plate	1	See Compr. Name Plate	1	See Compr. Name Plate	1
18	Drive Shaft	See Table 1	1	064-14971	1	See Table 3	1	064-20142	1
19	Valve Solenoid	025-18350	1	025-18350	1	025-18350	1	025-18350	1
20	Rear Gear Bearing	† 064-12288	1	■ 06-11665	1	● 064-11665	1	★ 064-22675	1
21	Internal Retaining Ring	029-08321	1	029-06722	1	029-06722	1	029-08604	1
22	"O" Ring	⊕ 028-04408	2	⊗ 028-04348	2	⊗ 028-04348	2	⊗ 028-05194	2
23	Shaft Seal Collar	⊕ 064-12318-005	1	⊗ 064-12318-007	1	⊗ 064-12318-007	1	⊗ 064-16649-011	1
24	Thrust Bearing	† 064-12284	1	■ 064-11644	1	● 064-11644	1	★ 064-22662	1
25	Thrust Collar -- High Speed Oil Pump	† 064-09587	1	■ 064-11654	1	See Table 3	1	★ 064-22713	1
26	"O" Ring	⊕ † 028-04409	2	■ 028-04352	1	● 028-04352	1	★ 028-04517	1
27	Oil Pump Cover -- High Speed	064-12317	1	064-11660	1	064-11660	1	064-22707	1
28	Pressure Plate -- Oil Pump H.S.	064-12548	1	064-11819	1	064-11819	1	064-22984	1
29	Insert Pin -- 3/16 Dia. x 1/2 Lg.	029-04138	3	029-04138	2	029-04138	2	029-04138	2
30	Bearing Housing Gasket	† 064-12414	1	■ 064-11802	1	● 064-15515	1	★ 064-23024	1
31	"O" Ring	† 028-04989	1	■ 028-05401	1	● 028-05401	1	—	—
32	"O" Ring -- Drive Shaft 1-13/16 I.D. x 3/32 Sect.	See Table 1	1	028-07407	1	028-07407	1	★ 028-04478	1
33	Volute Ring, Low Speed Pump	—	—	—	—	● 064-21467	1	★ 064-13695	1
34	Insert Pin	—	—	—	—	029-07014	1	029-06863	1
35	Oil Pump, Low Speed	064-13828	1	064-13841	1	064-15509	1	064-13911	1
36	Oil Pump Housing	064-13838	1	064-13842	1	—	—	064-15256	1
37	Thrust Plate	—	—	—	—	● 064-14989	1	—	—
38	Back-Up Plate	—	—	—	—	064-14988	1	—	—

† Parts included in Field Replacement Kit -- Models LTD53 & LTD59 -- Part No. 464-29624

■ Parts included in Field Replacement Kit -- Models LTD67 & LTD76 -- Part No. 464-29626

● Parts included in Field Replacement Kit -- Models LTD85 & LTD95 -- Part No. 464-29628

★ Parts included in Field Replacement Kit -- Models LTD108, LTD120 and LTD126 -- Part No. 464-29630

⊕ Parts included in Shaft Seal Kit -- Part No. 464-24257

⊗ Parts included in Shaft Seal Kit -- Part No. 464-24258

⊙ Parts included in Shaft Seal Kit -- Part No. 464-24258

⊗ Parts included in Shaft Seal Kit -- Part No. 464-29632