

OPEN COMPRESSOR PARTS LIST (CONTINUED)

Item No.	Description	Model LTD 53 – 59		Model LTD 67 – 76		Model LTD 85 – 95		Model LTD 108 – 120 – 126	
		YORK Part No.	Quan.	YORK Part No.	Quan.	YORK Part No.	Quan.	YORK Part No.	Quan.
156	Tee, Screw 1-1/2	023-04340	1	—	—	—	—	—	—
157		—	—	—	—	—	—	—	—
158		—	—	—	—	—	—	—	—
159		—	—	—	—	—	—	—	—
160		—	—	—	—	—	—	—	—
161	Control Shaft	029-11856	1	029-11856	1	029-11856	1	029-11856	1
162	Gasket, 2-1/2 O.D. x 2 I.D. x 1/16 Thk.	† 028-00781	1	■ 028-00781	1	● 028-00781	1	★ 028-00781	1
163	Shaft Control Cover	064-13909	1	064-13909	1	064-13909	1	064-13909	1
164	Special Washer	064-08815	1	064-08815	1	064-08815	1	064-08815	1
165	Screw, Cap 12 Pt. Hd. 1/2 – 20 UNF x 6 Lg.	021-11998	1	021-11998	1	021-11998	1	See Item 57	1
166	Lever, PRV Device Internal	364-28447	1	364-20399	1	364-21442	1	364-22708	1
167	Lever, PRV Device	See Figs. 9 & 10	1	See Figs. 18 & 19	1	See Figs. 27 & 28	1	See Figs. 35 & 36	1
168	Pin Insert, 3/32 Dia. x 3/8 Lg.	029-04551	2	029-04551	2	029-04551	2	029-04551	2
169	Screw, Special, 3/8 – 24 UNF x 1-5/8 Lg.	064-10825	1	064-10825	1	—	—	—	—
170	Screw, Special, 3/8 – 24 UNF x 2-3/4 Lg.	064-28428	1	—	—	—	—	—	—
171	Screw, Special, 1/2 – 20 UNF x 5-3/8 Lg.	—	—	—	—	064-09078	1	—	—
172	Fill Piece	064-28446	1	064-12328	3	064-09070	1	064-09070	2
173	Fill Piece	064-10821	1	—	—	064-09069	1	—	—
174	Lockwasher, Spring, 3/8	021-05269	1	021-10815	1	—	—	—	—
175	Lockwasher, Spring, 1/2	—	—	—	—	021-05271	1	—	—
176	Pin, Cotter 3/32 Dia. x 3/4 Lg.	021-01083	1	021-01083	1	021-01083	1	021-01083	2
177	Nut, Hex. Reg. 3/8 – 24 UNF	021-00474	3	—	—	—	—	—	—
178	Nut, Hex. Reg. 1/2 – 20 UNF	—	—	—	—	021-10171	3	021-10171	2
179	Rod, Adjustable	064-10823	1	064-12314	1	064-09080	1	064-09080	1
180	Bearing, Rod End Spherical	029-08343	2	029-08343	2	029-07015	2	029-07015	2
181	Screw, Special 1/2 – 20 UNF – 3 x 1-3/4 Lg.	—	—	—	—	064-09079	1	064-09079	2
182	Screw, Cap Hex. Hd., 1/4–20 UNC–2A x 3/4 Lg.	—	—	—	—	—	—	021-01379	2
183	Screw, Cap Hex. Hd., 1/4–20 x 1" Lg.	021-11914	2	021-11914	1	021-11914	2	—	—
184	Screw, Cap Hex. Hd., 1/4–20 x 1-1/2 Lg.	—	—	021-02399	1	—	—	—	—
185	Screw, Cap 12 Pt. Hd. 5/16–24 UNF x 1-3/4 Lg.	021-11532	1	021-11532	1	021-11532	1	021-11532	1
186		—	—	—	—	—	—	—	—
187	Screw, Cap 12 Pt. Hd., 5/16–18 UNC x 1" Lg.	021-12039	4	021-12039	4	021-12039	4	021-12039	4
188	Screw, Cap 12 Pt. Hd., 3/8–16 UNC x 1" Lg.	021-11149	6	—	—	—	—	—	—
189	Screw, Cap 12 Pt. Hd., 3/8–16 UNC x 1-1/4 Lg.	021-11141	19	021-11141	21	021-11141	4	021-11141	10
190	Screw, Cap 12 Pt. Hd., 3/8–16 UNC x 1-1/2 Lg.	021-11175	13	021-11175	11	021-11175	8	021-11175	32
191	Screw, Cap 12 Pt. Hd., 3/8–16 UNC x 1-3/4 Lg.	021-11916	5	—	—	021-11916	20	021-11916	14
192	Screw, Cap 12 Pt. Hd., 3/8–16 UNC x 7/8 Lg.	021-11139	4	021-11139	4	—	—	—	—
193	Screw, Cap 12 Pt. Hd., 3/8–16 UNC–3A x 2" Lg.	—	—	021-11917	6	—	—	—	—
194	Screw, Cap 12 Pt. Hd., 3/8–16 UNC x 2-1/4 Lg.	—	—	—	—	021-11920	2	—	—
195	Screw, Cap 12 Pt. Hd., 3/8–24 NF x 1" Lg.	—	—	—	—	021-11103	6	—	—

† Parts included in Field Replacement Kit – Models LTD53 & LTD59 – Part No. 464-29624

■ Parts included in Field Replacement Kit – Models LTD67 & LTD76 – Part No. 464-29626

● Parts included in Field Replacement Kit – Models LTD85 & LTD95 – Part No. 464-29628

★ Parts included in Field Replacement Kit – Models LTD108, LTD120 and LTD126 - Part No. 464-29630