



FIG. 2 — OPEN TURBOPAK — REAR VIEW

TABLE 1 — BASIC UNIT PARTS

ITEM	PART DESCRIPTION	QUAN.	PART NUMBER			
			OT A1 THRU A5	OT B1 THRU B3 C1 & C2	OT D1, D2, E1, F1, G1 & G2	OT H1 THRU HT H4 OT J1 THRU HT J3 OT K1 THRU HT K3
1	GASKET, SUCTION CONNECTION	2	028-08778-001	028-08778-002	028-08778-003	028-08778-004
2	GASKET, DISCHARGE	1	070-12343	070-12208	070-10630	070-10633
3	BURSTING, DISC	1	026-09353 <sup>2</sup>	026-09353 <sup>2</sup>	026-09353 <sup>2</sup>	026-09353 <sup>2</sup>
4	GASKET, BURSTING DISC	2	070-15845 <sup>2</sup>	070-15845 <sup>2</sup>	070-15845 <sup>2</sup>	070-15845 <sup>2</sup>
5	ISOLATOR	7	028-02162	028-02162	028-02162	028-02162
6	SOLENOID VALVE	1	025-16914	025-16914	025-16914	025-16914
7	DEHYDRATOR	1	026-14777-007	026-14777-007	026-14777-007	026-14777-007
8	EDUCTOR, OIL RETURN	1	364-18241	364-18241	364-18241	364-18241
9	MOTOR	1	SEE DATA NAMEPLATE	SEE DATA NAMEPLATE	SEE DATA NAMEPLATE	SEE DATA NAMEPLATE
10	VALVE, SOLENOID	1	025-16988	025-16988	025-16988	025-16988
11	VALVE, CHECK	1	022-03902	022-03902	022-03902	022-03902
12	ISOLATOR	4	028-08972	028-08972	028-08972	028-08972

<sup>2</sup>Order Bursting Disc Kit 367-35263