

ELECTRICAL AND PNEUMATIC COMPONENTS

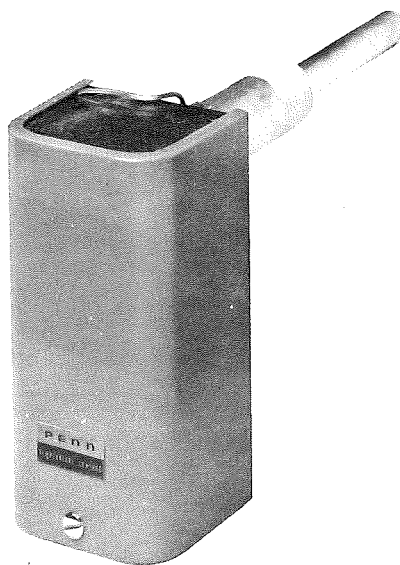


FIG. 6— LOW WATER TEMPERATURE THERMOSTAT

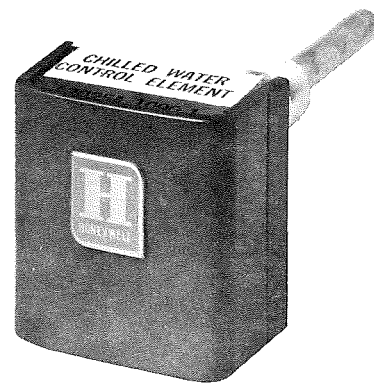


FIG. 7— TEMPERATURE CONTROL SENSOR

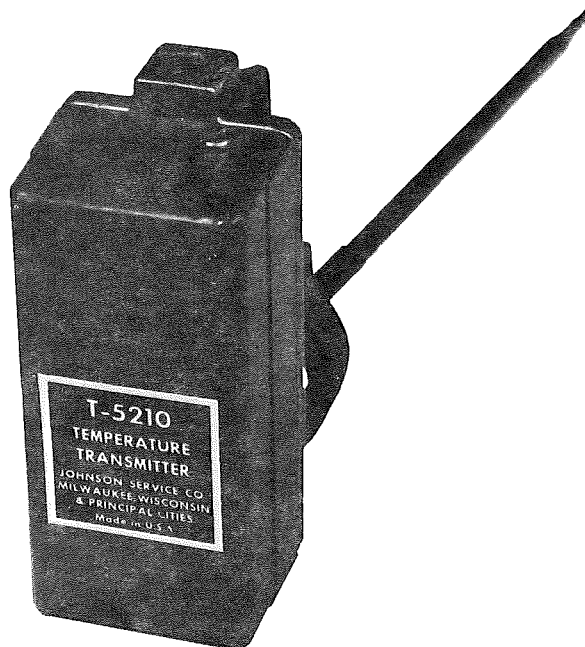


FIG. 8— LOW WATER TEMPERATURE TRANSMITTER
PNEUMATIC PRV CONTROL UNITS ONLY

Item	Description	Quan.	Part No.	Fig.
1	Low Water Temperature Thermostat Penn-A 19ABC-23-Range 20° F to 80° F	1	025-14464 *	6
2	Temperature Control Sensor Honeywell-7025A-1090	1	025-10439	7
3	Low Water Temperature Transmitter Johnson Service-T-5210-134 Range 32° F-57° F (Pneumatic Control Only)	1	022-03481	8

* Use same thermostat per LWT(S)