

ELECTRICAL AND PNEUMATIC COMPONENTS



FIG. 7 – LOW WATER TEMPERATURE THERMOSTAT

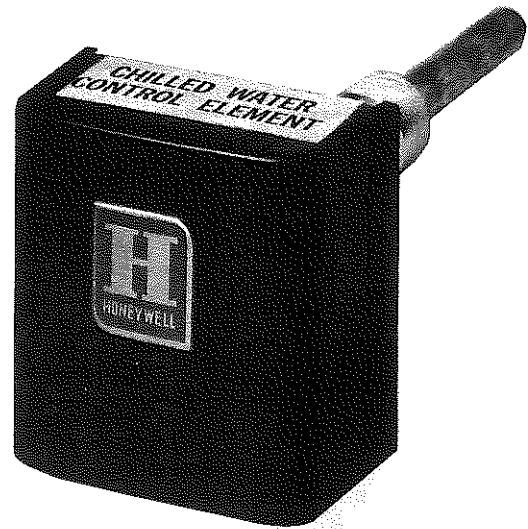


FIG. 8 – TEMPERATURE CONTROL SENSOR



FIG. 9 – LOW WATER TEMPERATURE TRANSMITTER PNEUMATIC PRV CONTROL UNITS ONLY

Fig.	Description	Quan.	Part No.
7	Low Water Temperature Thermostat Penn-A 19ABC-23-Range 20°F to 80°F	1	025-14464*
8	Temperature Control Sensor Honeywell-7025A-1090 Low Water Temperature Transmitter	1	025-10439
9	Johnson Service-T-5210-134 Range 32°F–57°F (Pneumatic Control Only)	1	022-03481

*Use same thermostat for LWT(S)