

## CHANGEABILITY OF THIS DOCUMENT

In complying with Johnson Controls' policy for continuous product improvement, the information contained in this document is subject to change without notice. Johnson Controls makes no commitment to update or provide current information automatically to the manual or product owner. Updated manuals, if applicable, can be obtained by contacting the nearest Johnson Controls Service office or accessing the Johnson Controls Knowledge Exchange website at <https://docs.johnsoncontrols.com/chillers/>.

It is the responsibility of rigging, lifting, and operating/service personnel to verify the applicability of these documents to the equipment. If there is any question regarding the applicability of these documents, rigging, lifting, and operating/service personnel should verify whether the equipment has been modified and if current literature is available from the owner of the equipment prior to performing any work on the chiller.

---

## REVISION NOTES

Revisions made to this document are indicated in the following table. These revisions are to technical information, and any other changes in spelling, grammar, or formatting are not included.

AFFECTED PAGES	DESCRIPTION
110	Added part number 022 12411 000 for steel valve where brass valve part number 022 10073 000 is also listed
110	Added part number 022 12412 000 for steel valve where brass valve part number 022 10074 000 is also listed

---

## ASSOCIATED LITERATURE

MANUAL DESCRIPTION	FORM NUMBER
YD Installation	160.69-N3
YD Field Connections	160.69-PW6
YD Field Control Modifications	160.69-PW2
YD Operations	160.69-O2
YD OptiView™ Renewal Parts	160.69-RP1
YD OptiView™ Operation	160.69-O1