



DESCRIPTION	USED WITH COMPRESSOR MODEL	PART NO. PRV POSITIONER		
		R-12 COMPR.	R-500 COMPR.	R-22 COMPR.
PRV POSITIONER CONOFLOW	226	024-10412	024-10412	024-10412
PRV POSITIONER CONOFLOW	238	024-12781	024-12781	024-12781
PRV POSITIONER CONOFLOW	255A	024-12781	024-16659	024-16660
	255B	024-16659	---	---

FIG. 13 – CONOFLOW PRV POSITIONER

B7W 30901



8375A



ITEM	PART DESCRIPTION	PART NO.	QUAN.
1	TEMPERATURE SENSOR (TS) (TRANSMITTER)	022-03481	1 (FIG. 14)
2	THERMOSTAT LOW WATER TEMP. (LWT)	025-14464	1 (FIG. 15)

FIG. 14 – TEMPERATURE SENSOR (TS)

FIG. 15 – THERMOSTAT LOW WATER TEMP. (LWT)