



FIG. 1— Typical 3 3/4" x 3 Compressor—Exploded View

Item No.	Part Name	York Part No.
1	Compressor, Bare	See Table 1
2	Housing, Compressor, Bare	See Table 2
3	Elbow, 90° Street 3/8 NPT x 3/8 FPT.	023-01688
4	Gasket, Hand Hole Cover Plate	070-02497
5	Plate, Cover, Handhole	See Table 3
6	Screw, Cap, Handhole, Cover Plate	021-09592
7	Head, Bearing, Oil Pump and Regulating Valve	See Fig. 2
8	Gasket, Bearing Head, Oil Pump End	028-00824
9	Filter, Oil, Disc Type	026-01688
10	Screw, Cap, Oil Filter Cover	021-01538
11	Gasket, Oil Filter Cover	064-20129
	Gasket, Suction Elbow - 4, 6, 8 Cyl.	028-00875
12	Gasket, Suction Stop Valve - 12 Cyl.	028-00551
	Gasket, Suction Stop Valve - 16 Cyl.	028-00882
13	Cylinder Sleeve Assembly	See Fig. 3
14	Unloader Device	See Fig. 3
15	Gasket, Discharge Valve Plate (1 Per Cylinder)	070-03814
16	Valve Assembly, Suction and Discharge	See Fig. 4
17	Head, Compressor, Plain	064-00293
18	Head, Compressor, Relief Valve Type	064-00294

Item No.	Part Name	York Part No.
19	Gasket, Compressor Head, Plain	070-03813
20	Gasket, Compressor Head, Relief Valve Type	070-03812
21	Screw, Cap, Top Head - Short (14 Per Head)	021-01589
22	Screw, Cap, Top Head - Long	021-01600
23	Valve, Cartridge, Relief	468-09331
24	Gasket, Relief Valve Cover	028-00538
25	Cover, Relief Valve	068-02906
26	Screw, Cap, Relief Valve Cover	021-01495
27	Strainer Assembly, Suction	See Fig. 5
28	Cover, Unloader Piston	064-00358
29	Gasket, Unloader Piston Cover	070-03810
30	Screw, Cap, Unloader Piston Cover	021-01485
31	Screw, Cap, Flywheel	021-09500
32	Lockwasher, Spring, Flywheel Bolt	021-05276
33	Washer, Flat, Flywheel Bolt	364-03284
	Crankshaft, 4 Cylinder	364-00312-001
	Crankshaft, 6 Cylinder	364-00311-001
34	Crankshaft, 8 Cylinder	364-00310-001
	Crankshaft, 12 Cylinder	364-00309-001
	Crankshaft, 16 Cylinder	364-00308-001