



**FIG. 9— TERMINAL PLATE**

**TABLE 9**

ITEM NO.	DESCRIPTION	PART NO.
1	Screw—7/16 X 1-3/4 (4 Req'd.)	021-01545
2	Lockwasher — 7/16 (4 Req'd.)	021-01161
3	Screw — 7/16 X 1-5/8 (10 Req'd.)	021-08579
4	Washer, Plain — 7/16 (20 Req'd.)	021-14111
5	Bolt, Terminal (6 Req'd.)	021-12696
6	Gasket, Terminal Bolt (6 Req'd.)	064-36151
7	Washer, Terminal Bolt (12 Req'd.)	028-09410
8	Nut, Hex (12 Req'd)	021-12724
9	Screw, Overload Protector (2 Req'd.)	021-14817
10	Terminal, Overload (4 Req'd.)	025-18650
11	Washer, Plain (2 Req'd.)	021-01240
12	Seal, O-Ring (2 Req'd.)	028-09347
13	Washer, Terminal (4 Req'd.)	028-09525
14	Lockwasher (2 Req'd.)	021-01133
15	Nut, Hex (2 Req'd.)	021-09991
16	Block, Terminal	025-19978
17	Gasket, Terminal Block	064-21839
18	Hex Connector (Short) } Not	064-26799
19	Hex Connector (Long) } Shown	064-21677

**TABLE 10 — STYLE D STANDARD REPLACEMENT COMPRESSORS\***

MODEL NO.	PART NO.	MODEL NO.	PART NO.
JS43	364-47286	JS44	364-47293
JS53	364-47287	JS54	364-47294
JS63	364-47288	JS64	364-47295
JS73	364-47289	JS74	364-47296
JS83	364-47290	JS84	364-47297

\* Compressors are evacuated, dehydrated, and charged with nitrogen before being sealed for shipment. Compressor part numbers listed do NOT include motor, motor housing, discharge manifold, crankcase heater, capacity control devices or oil charge. Crankcase is closed with blank hand-hole covers on both sides. For parts not included with replacement compressors, use parts from original compressor (if usable) or order new parts listed separately in this manual.

STYLE D REPLACEMENT COMPRESSORS FOR USE ON YCHA CHILLERS.\* (These compressors have fewer unloading steps than the standard compressors.)

MODEL NO.	PART NO.	MODEL NO.	PART NO.
JS43	364-47291	JS44	364-47298
JS63	364-47292	JS64	364-47299

**TABLE 11 — REPLACEMENT MOTORS**

VOLTAGE	MOTOR SIZE CODE**					
	M	N	P	Q	S	T
200-3-60	364-43271-008	364-43271-015	364-43271-022	364-43271-029	364-43271-036	364-43271-043
190-3-50/230-3-60	364-43271-009	364-43271-016	364-43271-023	364-43271-030	364-43271-037	364-43271-044
380/415-3-50/460-3-60	364-43271-010	364-43271-017	364-43271-024	364-43271-031	364-43271-038	364-43271-045
500-3-50/575-3-60	364-43271-011	364-43271-018	364-43271-025	364-43271-032	364-43271-039	364-43271-046
220-3-50	364-43271-012	364-43271-019	364-43271-026	364-43271-033	364-43271-040	364-43271-047
346-3-50/380-3-60	364-43271-013	364-43271-020	364-43271-027	364-43271-034	364-43271-041	364-43271-048
440-3-50	—	—	—	—	364-43271-042	364-43271-049

\*\*As indicated by sixth digit of model number. Replacement motor must be same size as original.  
 "L" size motor no longer available. Use "M" motor of same voltage.

**TABLE 12 — SERVICE AIDS**

GASKET KIT				
COMPRESSOR MODEL				
4 Cyl.	5 Cyl.	6 Cyl.	7 Cyl.	8 Cyl.
364-36600	364-36601	364-36601	364-36602	364-36602

VALVE RETAINING CLIP	064-37274
BEARING REMOVAL TOOL	364-37260
ROTOR MANDREL*	364-37273
STATOR REMOVAL TOOL	029-13597

\*Screws into end of crankshaft to aid in removing and installing rotor.