



FIG. 3 – MANIFOLD ARRANGEMENTS

LD03064

ITEM NO.	DESCRIPTION	COMPRESSOR		
		4 CYLINDER	6 CYLINDER	8 CYLINDER
1	Housing, Compressor	064-48243-000	064-48244-000	064-48179-000
2	Head Compressor	064-48321-000	064-48321-000	064-48321-000
3	Gasket, Head No. Required Per Compressor	028-12559-000 4	028-12559-000 5	028-12559-000 6
4	Screw, Head No. Required Per Compressor	021-17783-000 16	021-17783-000 16	021-17783-000 16
5	Cover, Motor	064-48363-000	064-48177-000	064-48178-000
6	Gasket, Motor Cover	028-13108-000	028-13108-000	028-13108-000
7	Screw, 1/2 Hex Cap No. Required Per Compressor	021-18021-000 22	021-18021-000 21	021-18021-000 22
8	Lockwasher, Helic. Spring No. Required Per Compressor	021-05271-000 22	021-05271-000 21	021-05271-000 22
9	Stud, 1/2 No. Required Per Compressor	021-12731-000 3	021-12731-000 3	021-12731-000 2
10	Nut, 1/2 Hex No. Required Per Compressor	021-11154-000 3	021-11154-000 2	021-11154-000 2
11	Washer Clipped Circular No. Required Per Compressor	021-17774-000 3	021-17774-000 3	021-17774-000 2
12	Screen, Suction (See Item 57 for Gasket)	026-28473-000	026-28473-000	026-28474-000
13	Manifold, Discharge	064-23147-000	064-48320-000	664-48341-000
14	Gasket, Discharge Manifold No. Required Per Compressor	064-21838-000 2	064-21838-000 3	064-21838-000 4
15	Screw, 3/8 Hex Cap No. Required Per Compressor	021-01485-000 8	— —	021-01485-000 8
16	Washer No. Required Per Compressor	021-16814-000 8	— —	021-16814-000 8
17	Screw, 3/8 Hex Flange No. Required Per Compressor	— —	021-17784-000 4	— —
18	Screw, 3/8 Hex Flange No. Required Per Compressor	— —	021-17782-000 4	— —
19	Screw, 3/8 Hex Flange No. Required Per Compressor	— —	021-17781-000 4	021-08875-000 8
20	Bearing Head Oil Pump End	See Figure 9		
21	Gasket, Bearing Head Oil Pump End	028-12554-000	028-12554-000	028-12554-000
22	Screw, Hex Flange No. Required Per Compressor	021-17692-000 44	021-17692-000 44	021-17692-000 44