

LEGEND (Cont'd.)

ITEM NO.	DESCRIPTION	COMPRESSOR		
		4 CYLINDER	6 CYLINDER	8 CYLINDER
52	Piston Assembly	See Figure 7		
53	Connecting Rod Assembly	See Figure 8		
54	Terminal Box	See Figure 10		
55	Valve, Suction Stop	022-02844-000	022-02844-000	022-02845-000
56	Screw, 5/8 Hex Cap No. Required Per Compressor	021-16817-000 4	021-16817-000 4	021-16818-000 4
57	Gasket (2 Required)	064-47079-000	064-47079-000	064-47204-000
58	Valve, Discharge Stop	022-01394-000	022-01394-000	022-02844-000
59	Screw, 5/8 Hex Cap No. Required Per Valve	021-16821-000 4	021-16821-000 4	021-16817-000 4
60	Gasket	064-47078-000	064-47078-000	064-47079-000
61	Sight Glass, Oil (2 Required)	026-17581-000	026-17581-000	026-17581-000
62	Sealer, Refrigerant Pipe	013-02894-000	013-02894-000	013-02894-000
63	Valve, Oil Charging	022-01582-000	022-01582-000	022-01582-000
64	Cap, Oil Charging Valve	023-00977-000	023-00977-000	023-00977-000
65	Valve, Oil Check, 1/8	022-04444-000	022-04444-000	022-04444-000
66	Crankcase Heater – 120V – 240V	025-29650-000 025-29651-000	025-29650-000 025-29651-000	025-29650-000 025-29651-000
67	Heat Conductive Compound	013-00898-000	013-00898-000	013-00898-000
68	Drain Orifice Plug (Not Shown) No. Required Per Compressor	064-47349-000 1	064-47349-000 2	064-47349-000 3
69	Pipe Plug, 1/4 Square Hd (Not Shown) No. Required Per Compressor	023-01972-000 3	023-01972-000 4	023-01972-000 5
70	Pipe Plug, 3/8	023-01983-000	023-01983-000	023-01983-000
70A	Oil Temp Sensor	025-32966-000	025-32966-000	025-32966-000
71	Pipe Plug, Magnetic Sq Hd	023-15718-000	023-15718-000	023-15718-000
72*	Cover Plate, Blank	064-48187-000	064-48187-000	064-48187-000

* Used to replace Solenoid Valves for reduced steps of unloading. See Table 1.