



**BEARING HEAD, OIL PUMP END  
(OIL PUMP REMOVED)**

ITEM NO.	DESCRIPTION	PART NUMBER
<b>20</b>	Head, Bearing Assembly (Oil Pump End) Includes Items A, B, C, D, E, F, G, H & I	364-49266-000
<sup>S</sup> <b>20A</b>	Bearing, Crankshaft	029-11097-000
<b>20B</b>	Pipe Plug, 3/8 Hex Socket	023-04298-000
<b>20C</b>	Pipe Plug, 1/8 Hex Socket	023-01970-000
<b>20D</b>	Sealer, Loctite Grade AVV (Use With Items 20B and 20C)	013-01671-000
<b>20E</b>	Pipe Plug, 1/4 Square Head	023-01972-000
<b>20F</b>	Sealer, Removable Thread (Use With Item 20E)	013-01678-000
<b>20G</b>	Precipitator Wire Mesh	026-35313-000
<b>20H</b>	Cover	064-49267-000
<b>20I</b>	Cap Screw (6 Required)	021-01361-000
—	Head, Bearing (Oil Pump End) (Does Not Include Items A, B, C, D, E, F, G, H & I)	064-49260-000

S = Recommended Stock Spare Part

**FIG. 10 – OIL PUMP END BEARING HEAD**