



LD06943

ITEM NO.	DESCRIPTION	PART NUMBER
1	Head, Bearing (Oil Pump End)	064-49260-000
<sup>s</sup> 2	Bearing, Crankshaft	029-23755-000
3 <sup>1</sup>	Pipe Plug, 3/8 Hex Socket	023-04298-000
4 <sup>2</sup>	Pipe Plug, 1/4 Square Head	023-01972-000
5 <sup>3</sup>	Pipe Plug, 1/8 Hex Socket	023-01970-000
6 <sup>4</sup>	Sealer, Loctite (Use with Items 3 and 5)	013-01671-000
7 <sup>5</sup>	Sealer, Removable Thread (Use with Item 4)	013-01678-000
8	Precipitator, Wire Mesh	026-35313-000
9	Cover	064-49267-000
10	Screw, 1/4 Hex Cap (6 Required)	021-01361-000
16 (Table 2)	Head, Bearing Assembly (Oil Pump End) Includes Items 1 through 10	364-50042-000

<sup>s</sup> = Recommended Stock Spare Part  
<sup>1</sup> = Same as ITEM NO. 238 (Table 2)  
<sup>2</sup> = Same as ITEM NO. 36 (Table 2)  
<sup>3</sup> = Same as ITEM NO. 92 (Table 2)  
<sup>4</sup> = Same as ITEM NO. 42 (Table 2)  
<sup>5</sup> = Same as ITEM NO. 224 (Table 2)

FIG. 54 – OIL PUMP END BEARING HEAD ASSEMBLY