



LD06964

ITEM NO.	DESCRIPTION	PART NUMBER
1	Oil Pump	026-35351-000
2	Valve, Access	022-04521-000
3 <sup>1</sup>	Sealer, Removable Thread (Use with Item 2)	013-01678-000
<b>205</b> <b>(Table 2)</b>	Oil Pump Assembly Includes Items 1 through 3	364-49026-000

<sup>1</sup> = Same as ITEM NO. 224 (Table 2)

FIG. 55 – OIL PUMP ASSEMBLY