

ITEM NO.	DESCRIPTION	PART NO.
1	Access Cover Plate	665-25185
2	Gasket for Item No. 1	028-11904
3	Cap Screw for Item No. 1 (16 Req'd - 5 / Pkg.)	221-01545-800
4	Pump, Oil	026-30586*
5	Roll Pin, (Used on 50 Hz Compressors Only) See Fig. 8	029-20840
6	Gasket, Oil Pump	028-11902
7	Screw, Oil Pump (6 Req'd - 5 / Pkg.)	221-01433-800
8	Valve Oil Charging	022-01582
9	Seal Cap	023-00977
10	Sight Glass	026-17581
11	Valve, Suction Stop 1-5/8" (Z4H-A)	022-03727-003
	(Z4J-B)	002-01152
	2-1/8" (Z4K-B; Z4M-C; Z6N-C;)	022-01393
	2-5/8" (Z6R-D; Z6S-D)	022-01394
3-1/8" (Z6W-E; Z6AE-E)	022-08851	
12	Valve, Discharge Stop 1-3/8" (Z4H, Z4J)	022-03727-002
	1-5/8" (Z4K, Z4M, Z6N, Z6R, Z6S, Z6W, Z6AE)	022-03727-003
13	Screw (Item 11 to Compressor) Z4H-A	021-08318
	Z4J-B	021-17241
	Z4K-B; Z4M-C; Z6N-C	021-16821
	Z6R-D; Z6S-D	021-16821
	Z6W-E; Z6AE-E	021-16817
14	Screw (Item 12 to Compressor)	021-08318
15	Screen, Suction Strainer Z4H-A; Z4J-B	026-30599
	Z4K-B; Z4M-C; Z6N-C; Z6R-D; Z6S-D	026-30601
	Z6W-E; Z6AE-E	026-30602
16	Gasket, Suction Strainer & Stop Valve Z4H-A; Z4J-B	028-11912
	Z4K-B; Z4M-C; Z6N-C; Z6R-D, C; Z6S-D	064-47078
	Z6W-E	064-47078
	Z6AE-E	064-47079
17	Gasket, Discharge Stop Valve	028-11912
18	Valve, High Pressure Relief	022-03871
19	Discharge Valve Cage Assembly	See Figure 3
20	Screw, Discharge Valve Cage Assembly To Compressor (4 Per Cylinder - 4 / Pkg.)	221-13824-800
21	Suction Valve Plate Assembly	See Figure 4
22	Cylinder Sleeve Z4H-A; Z4K-B; Z6N-C; Z6S-D	065-25237
	Z4J-B; Z4M-C; Z6R-D; Z6W-E	065-25240
	Z6AE-E	065-25325

*At some future date 026-30586 will be superseded by 026-32387.