



FIG. 2 —CONTROL CENTER — FRONT & REAR

MAIN CONTROL COMPARTMENT (BASIC PARTS) (REFER TO FIG. 2)

ITEM	DESCRIPTION	PART NO.	QUAN.	SEE FIG.
1	Door & Hinge Assembly	366-81443	1	1
2	Relay Mounting Panel	366-81518	1	3
3	Recepticle, Relay	025-19688	14	3
4	Retainer Relay	024-19056	14	3
5	Fastner Pawl (Lock & Keys)	021-13025	1	2
6	Insulation Terminal Block	066-81517	1	3
7	Relay, Control (13R)	024-20090	1	3
8	Relay, Control (1R, 2R, 6R, 7R, 8R, 9R, 10R, 11R, 12R)	024-18784	9	3
9	Relay, Control (3R, 4R, 5R)	024-20089	3	3
10	Timer Repeat Cycle (1TR)	025-20790	1	3
11	Timer (2TR)	025-17172	1	3
12	Connector, Electrical (12 Pin)	025-20787	1	3
13	Connector Electrical (15 Pin)	025-20788	1	3
14	Control, Pressure (OP)	225-14386-003	1	3
15	Control, Pressure (HP)	025-14385	1	3
16	Control, Pressure (PHP)	025-17676	1	3
17	Bushing (For Press. Controls- Items 14, 15, 16)	025-10147	3	3
18	Control, Purge Cycle Counter (PPC)	025-17687	1	3
19	Terminal, Block	025-20945	23	3
20	Terminal, Block	025-20944	21	3
21	Strip, Marker	025-20793	1	3
22	Strip, Marker	025-20794	1	3
23	Cover, Access Panel	066-81510	1	2
24	Connector, Electrical	025-21159	1	
25	Block, Terminal End	025-20946	2	2
26	Temperature Control Module (TM)	031-00080	1	2