

**SOLID STATE STARTER (OPTIONAL)  
TRANSFORMER FUSE AND FUSE HOLDER  
SEE FIGS. 4 & 6**

ITEM	DESCRIPTION	208V		220V, 230V, 240V, 440V, 460V, 480V		550V, 575V, 600V		400V, 415V, 380V		SEE FIG.
		PART NO.	QUAN.	PART NO.	QUAN.	PART NO.	QUAN.	PART NO.	QUAN.	
45	Transformer	025-17770	1	025-17224	1	025-14250	1	025-19498	1	4
46	Fuse	025-20785	1	025-20785	1	025-20785	1	025-20785	1	6
47	Fuse Holder	025-20786	1	025-20786	1	025-20786	1	025-20786	1	6

**OIL PUMP STARTER  
HEATER ELEMENTS (REFER TO FIG. 4)**

VOLTS – PHASE – HERTZ	PART NO.	QUAN.
208, 220, 230, 240-3-60	024-19428	3
440, 460, 480-3-60	024-18424	3
550, 575, 600-3-60	024-19444	3
380, 416-3-60	024-20092	3
380, 400, 415-3-50		
220-3-50	024-19424	3
346-3-50	024-19420	3
440-3-50	024-20799	3

