

ITEM NO.	DESCRIPTION	PART NO.
1	Top Head & Access Cover Plate	665-25185
2	Gasket For Item No. 1	028-12573
3	Cap screw For Item No. 1 (5 / Pkg.)	021-17769-000
4	Pump, Oil	026-32387
6	Gasket, Oil Pump	028-12556
7	Screw, Oil Pump (5 / Pkg.)	021-17689-000
8	Valve Oil Charging	022-01582
9	Seal Cap	023-00977
10	Sight Glass	026-17581
11	Valve, Suction Stop 1-5/8" (Z4H) (Z4J) 2-1/8" (Z4K, Z4M, Z6N, Z6R) (Z6S) 2-5/8" (Z6R, Z6S, Z6W, Z6AE) 3-1/8" (Z6W, Z6AE)	022-03727-003 022-01152 022-01393 022-01393 022-01394 022-08851
12	Valve, Discharge Stop 1-3/8" (Z4H, Z4J) 1-5/8" (Z4K, Z4M, Z6N, Z6R, Z6S, Z6W, Z6AE)	022-03727-002 022-03727-003
13	Screw (Item 11 To Compressor) Z4H Z4J Z4K, Z4M, Z6N, Z6R, Z6S Z6R, Z6S, Z6W, Z6AE Z6W, Z6AE	021-08318 021-17241 021-16821 021-16821 021-16817
14	Screw (Item 12 To Compressor)	021-08318
15	Screen, Suction Strainer Z4H, Z4J Z4K, Z4M, Z6N, Z6R, Z6S Z6W, Z6AE Z6W, Z6AE	026-30599 026-30601 026-30601 026-30602
16	Gasket, Suction Strainer & Stop Valve Z4H, Z4J Z4K, Z4M, Z6N, Z6R, Z6S Z6W, Z6AE Z6AE	028-11912 064-47078 064-47078 064-47079
17	Gasket, Discharge Stop Valve	028-11912
18	Valve, High Pressure Relief	022-03871
19	Discharge Valve Cage Assembly	See Figure 3
20	Screw, Discharge Valve Cage Assembly To Compressor (4 Per Valve — 4 / Pkg.)	221-13824-800
21	Suction Valve Plate Assembly	See Figure 4
22	Cylinder Sleeve Z4H, Z4K, Z6N, Z6S Z4J, Z4M, Z6R, Z6W, Z6AE Z6AE	065-25237 065-25240 065-25325