

Item No.	Description	Part No.
	Seal Spacer Complete (Includes Items 1-9)	364-43437
1	Spacer, Seal	064-28859
2	Cap, Oil Relief Valve	065-06394
3	Gasket	065-21657
4	Spring, Helical	029-06143
5	Plunger	065-01331
6	Pin, Insert (2 Req'd)	029-04750
7	Plug Pipe 1/4"	023-01972
8	Conn., Flare	023-09675
9	Plug, Pipe 3/8"	023-01983


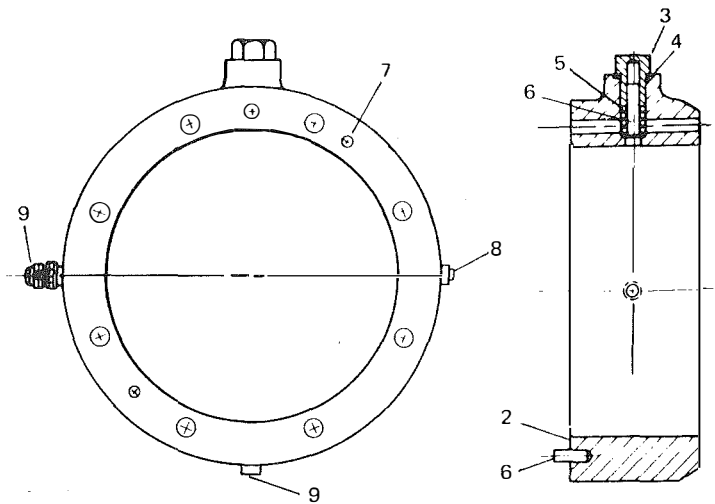


FIG. 3 — SEAL SPACER ASSEMBLY

HALOGEN

Item No.	Description	Part No.
1	Valve, Stop	022-02998
2	Valve, Ther. Exp.	025-19982
3	Valve, Stop	022-03683
4	Cooler, Oil	366-43124
5	Strainer	029-08224
6	Heat Exchanger, 6, 8 Cyl. 12, 16 Cyl.	364-23659 364-26660

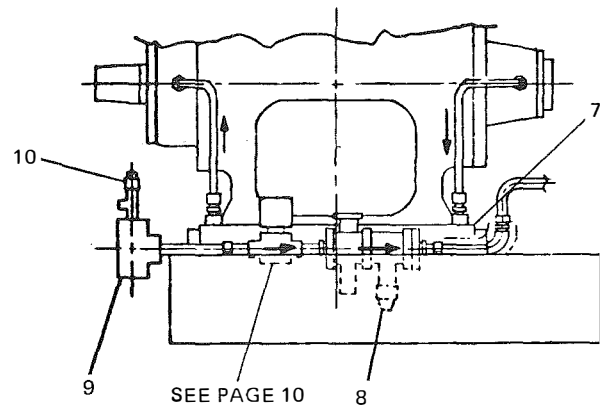

AMMONIA

7	Cooler, Oil	366-43124
8	Valve, Ther. Exp.	025-20914
9	Strainer, Ammonia	366-01043
10	Valve, Stop	022-01582

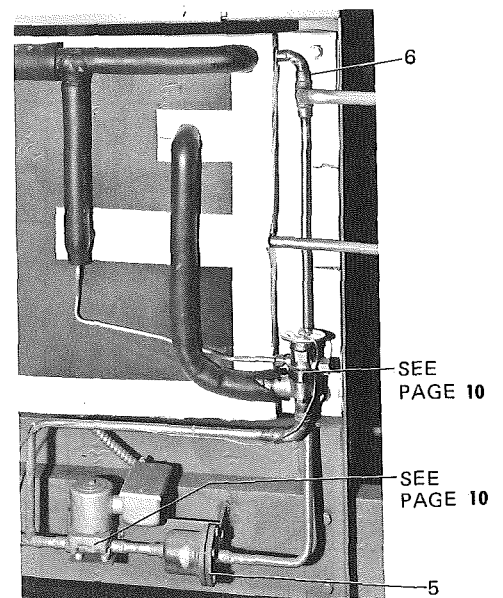
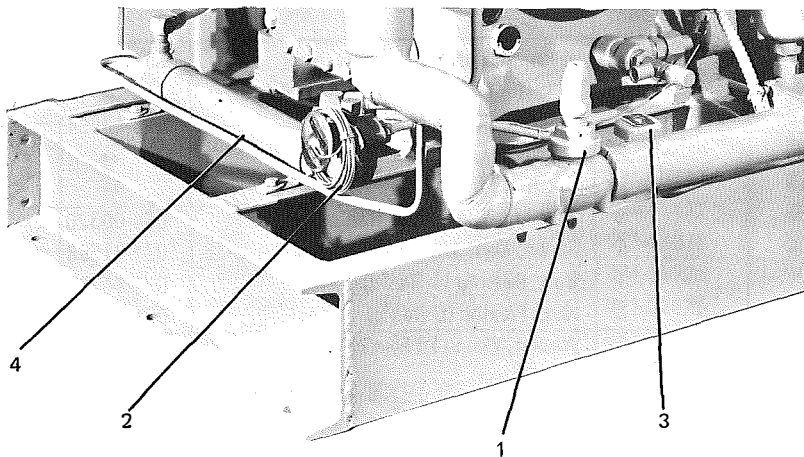


FIG. 4 — OIL/COOLER/DESUPER HEATER COMPONENTS
3B