



FIG. 5 — NON-UNLOADING TYPE CYLINDER

Item No.	Description	Part No.	Item No.	Description	Part No.	
1	Sleeve, Cylinder, Non-Unloading	064-15557	8A	Cage Assembly (Includes items 6,7,8,9,10,11,12)		
2	Gasket (2 Req'd)	064-14346			R-12, R-22, R-502 (Low Stage)	364-41302
3	Plate R-12, R-22, R-502 R-717	064-34098 064-34096			R-12, R-22, R-502 (High Stage) R-717 (Low & High Stage)	364-41303 364-41302
4	Spring (6 Req'd)	029-13813	9	Seat, Valve	064-13846	
5	Valve	064-14341	10	Screws (3 Req'd)	021-13819	
6	Spring (6 Req'd)	029-13248	11	Lockwasher (3 Req'd)	021-05287	
7	Valve	064-12164	12	Pin, Insert	029-08661	
8	Cage R-12, R-22, R-502 (Low Stage) R-12, R-22, R-502 (High Stage) R-717 (Low & High Stage)	064-34100 064-34102 064-34100				

Item No.	Description	Part No.
1	Plate, Hold Down	064-13859
2	Spacer	064-15571
3	Screw, Cap, Hex Hd.	021-01598
4	Lockwasher, Spring, 1/2" Heavy	021-05293

