



FIG. 5 — NON-UNLOADING TYPE CYLINDER

Item No.	Description	Part No.	Item No.	Description	Part No.
1	Sleeve, Cylinder, Non-Unloading	064-15557	8A	Cage Assembly (Includes items 6,7,8,9,10,11,12)	
2	Gasket (2 Req'd)	064-14346		R-12, R-22, R-502 (Low Stage)	364-41302
3	Plate R-12, R-22, R-502 R-717	064-34098 064-34096		R-12, R-22, R-502 (High Stage)	364-41303
4	Spring (6 Req'd)	029-13813		R-717 (Low & High Stage)	364-41302
5	Valve	064-14341	9	Seat, Valve	064-13846
6	Spring (6 Req'd)	029-13248	10	Screws (3 Req'd)	021-13819
7	Valve	064-12164	11	Lockwasher (3 Req'd)	021-05287
8	Cage		12	Pin, Insert	029-08661
	R-12, R-22, R-502 (Low Stage)	064-34100			
	R-12, R-22, R-502 (High Stage)	064-34102			
	R-717 (Low & High Stage)	064-34100			

Item No.	Description	Part No.
1	Plate, Hold Down	064-13859
2	Spacer	064-15571
3	Screw, Cap, Hex Hd.	021-01598
4	Lockwasher, Spring, 1/2" Heavy	021-05293

