

TABLE 5 - REFRIGERANT PIPING COMPONENTS

ITEM	QTY PER UNIT	DESCRIPTION	SYS.	QCC2015C AND QCC2020C	QCC2025C	QCC2030C
4 ^S	1	Valve, Stop (Liquid Line)	1	022-11306-000	022-10022-000	022-10022-000
6A	1	Moisture Indicator	1	026-12992-000	026-12992-000	026-12992-000
7	1	Valve, Access (Suction)	1	022-00009-000	022-00009-000	022-00009-000
10A	1	Valve, Ball (Suction)	1	022-08883-000	022-09752-000	022-09752-000
11	1	Valve, Access (Discharge)	1	022-00009-000	022-00009-000	022-00009-000
12A	1	Valve, Ball (Discharge)	1	022-09750-000	022-09750-000	022-09750-000
13	2	Compressor	1	See pages 19 and 21		
14	1	Valve, Relief (Discharge)	1	022-10682-001	022-10682-001	022-10682-001
15	1	Inline Sight Glass	1	026-41616-000	026-41616-000	026-41616-000

^S = Recommended Spare Part

See Figures 5 - 8 start on page 11

TABLE 6 - REFRIGERANT PIPING COMPONENTS

ITEM	QTY PER UNIT	DESCRIPTION	SYS.	QCC2040C	QCC2045C	QCC2050C
4 ^S	2	Valve, Stop (Liquid Line)	Both	022-10022-000	022-10022-000	022-10022-000
6A	2	Moisture Indicator, Body	Both	026-32397-000	026-32397-000	026-32397-000
6B	2	Moisture Indicator, Sight Glass Cap	Both	026-32800-000	026-32800-000	026-32800-000
7	2	Valve, Access (Suction)	Both	022-00009-000	022-00009-000	022-00009-000
10A	1	Valve, Ball (Suction)	Sys1	022-09752-000	022-09752-000	022-09752-000
10B	1		Sys2			
11	2	Valve, Access (Discharge)	Both	022-00009-000	022-00009-000	022-00009-000
12A	1	Valve, Ball (Discharge)	Sys1	022-09750-000	022-09750-000	022-09750-000
12B	1		Sys2			
13	4	Compressor	Both	See pages 19 and 21		
14	2	Valve, Relief (Discharge)	Both	022-10682-001	022-10682-001	022-10682-001
15	2	Inline Sight Glass	Both	026-41616-000	026-41616-000	026-41616-000

^S = Recommended Spare Part

See Figures 5 - 8 starting on page 11