

SECTION 6 - CONTROL PANEL AND POWER PANEL COMPONENTS

TABLE 12 - CONTROL PANEL AND POWER PANEL IDENTIFIERS (TO IDENTIFY REPLACEMENT PART NUMBERS)

MODEL	VOLTAGE CODE	SINGLE POINT TERMINAL BLOCK (SX)	SINGLE POINT NON-FUSED DISCONNECT SWITCH (SD)	SINGLE POINT CIRCUIT BREAKER (BX)
QCC2015C	17 & 28	371-05161-101	371-05161-201	371-05161-301
	40 & 46	371-05161-102	371-05161-202	371-05161-302
	50 & 58	371-05161-102	371-05161-202	371-05161-302
QCC2020C	17 & 28	371-05161-101	371-05161-201	371-05161-301
	40 & 46	371-05161-102	371-05161-202	371-05161-302
	50 & 58	371-05161-102	371-05161-202	371-05161-302
QCC2025C	17 & 28	371-05162-101	371-05162-201	371-05162-301
	40 & 46	371-05162-102	371-05162-202	371-05162-302
	50 & 58	371-05162-102	371-05162-202	371-05162-302
QCC2030C	17 & 28	371-05162-101	371-05162-201	371-05162-301
	40 & 46	371-05162-102	371-05162-202	371-05162-302
	50 & 58	371-05162-102	371-05162-202	371-05162-302
QCC2040C	17 & 28	371-05163-101	371-05163-201	371-05163-301
	40 & 46	371-05163-102	371-05163-202	371-05163-302
	50 & 58	371-05163-102	371-05163-202	371-05163-302
QCC2045C	17 & 28	371-05163-101	371-05163-201	371-05163-301
	40 & 46	371-05163-102	371-05163-202	371-05163-302
	50 & 58	371-05163-102	371-05163-202	371-05163-302
QCC2050C	17, 28 & 40	371-05163-103	371-05163-203	371-05163-303
	46, 50 & 58	371-05163-102	371-05163-202	371-05163-302
QCC2060C	17, 28 & 40	371-05163-103	371-05163-203	371-05163-303
	46, 50 & 58	371-05163-102	371-05163-202	371-05163-302
QCC2070C	17 & 28	371-05163-103	371-05163-203	371-05163-303
	40 & 46	371-05163-104	371-05163-204	371-05163-304
	50 & 58	371-05163-104	371-05163-204	371-05163-304

Select panel part number from the tables above or from the panel nameplate label shown on *Figure 10 on page 21*, then refer to the 'control and power panel components' information *Table 13 on page 26*. See *Figure 11 on page 24* and *Figure 12 on page 25*.