



TRANSDUCER AND THERMISTOR WIRE HARNESS CONNECTORS

FIELD REPLACEMENT PART NUMBERS

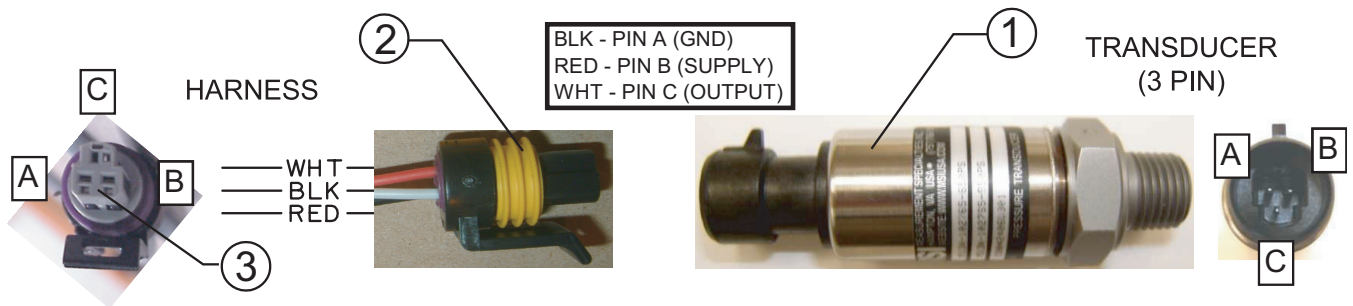

| Item No. | Location | Description | Pins | Part Number |
|----------|--------------|----------------|-----------|---------------|
| 1 | Transducer | (0-200 PSIS) | 3 Pin End | 025-41756-001 |
| | | (0-400 PSIS) | | 025-41756-002 |
| | | (0-650 PSIS) | | 025-41756-003 |
| | | (0-150 PSIS) | | 025-41756-004 |
| | | (0-175 PSIS) | | 025-41756-005 |
| 2 | Wire Harness | Plug Connector | 3 Pin End | 025-41761-000 |
| 3 | | Contact Pins | | 025-41812-000 |

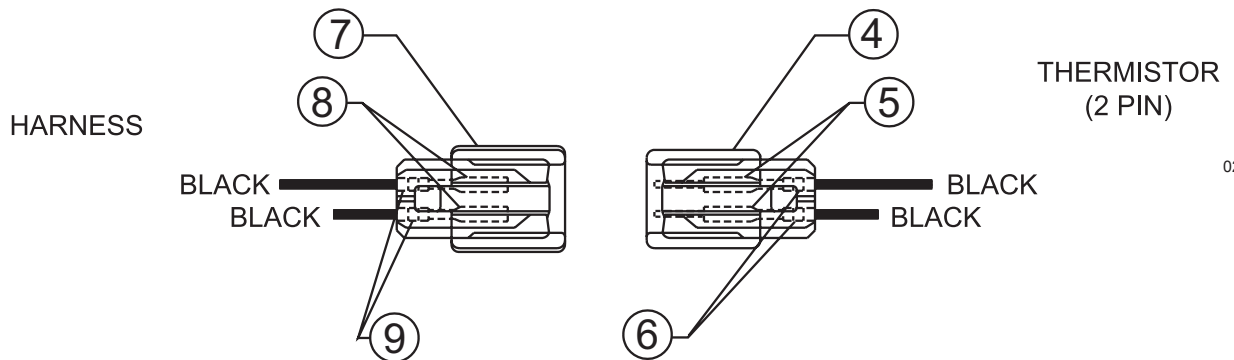

| ITEM NO. | LOCATION | DESCRIPTION | PINS | PART NUMBER |
|----------|--------------------|----------------|-----------|---------------|
| 4 | Temperature Sensor | Plug Connector | 2 Pin End | 025-28948-000 |
| 5 | | Contact Pins | | 025-28949-000 |
| 6 | | Rubber Collar | | 025-28950-000 |
| 7 | Wire Harness | Plug Connector | 2 Pin End | 025-28951-000 |
| 8 | | Contact Pins | | 025-28952-000 |
| 9 | | Rubber Collar | | 025-28950-000 |

FIGURE 18 - TRANSDUCER AND THERMISTOR WIRE HARNESS CONNECTORS - FIELD REPLACEMENT PART NUMBERS