

To identify replacement part numbers, select “Panel Identifier Number” from the table below or from the panel nameplate shown on *Figure 15 on page 25*,

then refer to the “Control and Power Panel Components” information (*Table 16 on page 27*; see also *Figure 14 on page 39* and *Figure 15 on page 40*).

**TABLE 15 - CONTROL PANEL AND POWER PANEL IDENTIFIERS**

MODEL	VOLTAGE CODE	SINGLE POINT TERMINAL BLOCK (SX)	SINGLE POINT NON-FUSED DISCONNECT SWITCH (SD)	SINGLE POINT CIRCUIT BREAKER (BX)
QTC2015T & QTC2020T	17 & 28	371-05161-101	371-05161-201	371-05161-301
	40, 46 & 58	371-05161-102	371-05161-202	371-05161-302
QTC2025T	17 & 28	371-05162-101	371-05162-201	371-05162-301
	40	371-05162-102	371-05162-202	371-05162-301
	46 & 58	371-05162-102	371-05162-202	371-05162-302
QTC2030T	17 & 28	371-05162-101	371-05162-201	371-05162-301
	40, 46 & 58	371-05162-102	371-05162-202	371-05162-302
QTC2035T & QTC2040T	17 & 28	371-05163-101	371-05163-201	371-05163-301
	40, 46 & 58	371-05163-102	371-05163-202	371-05163-302
QTC2045T	17, 28 & 40	371-05163-103	371-05163-203	371-05163-303
	46, & 58	371-05163-102	371-05163-202	371-05163-302